

VERSARACK + BEER CAVE

ASSEMBLY GUIDE



Intertek

Sanitation Listed
Certified to NSF/ANSI 2 by Intertek

-Size of parts will differ depending on customer's order.

-Quantity of parts might differ depending on customer's order.

NEED:



Two people
needed



$\frac{1}{2}$ " Wrench & Ratchet with
 $\frac{1}{2}$ " Deep Well Socket




Level




Utility
Gloves

PARTS LIST


(Upright)

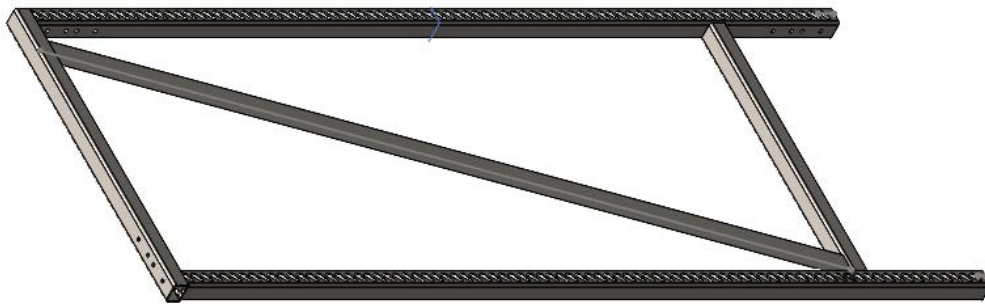


(Sway Braces – two (2) x 3" Sway brace per section is required)

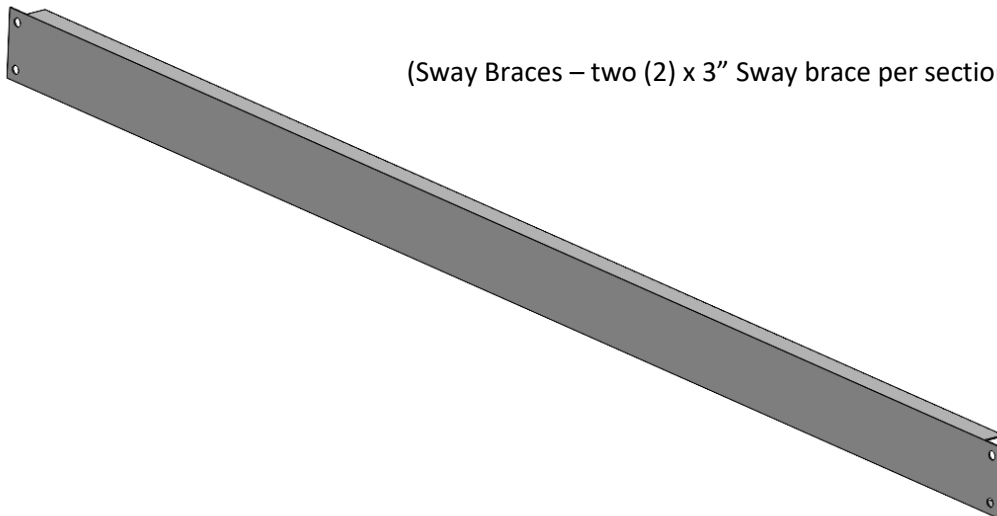


(Shelves)

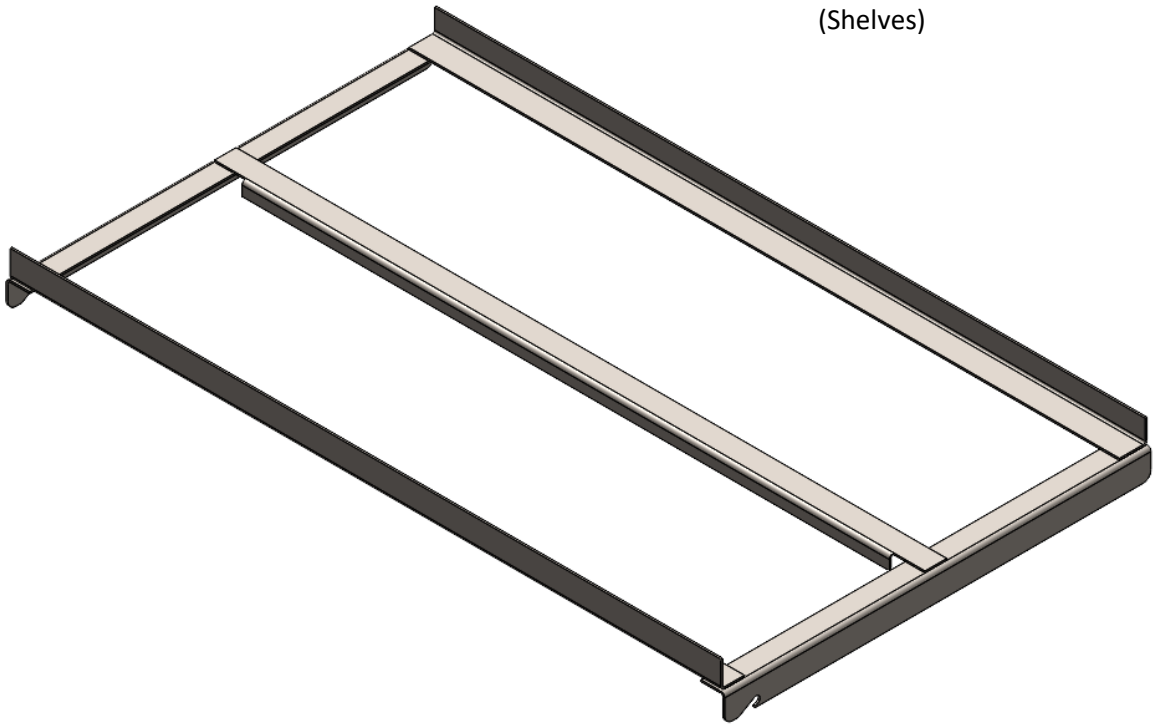


(Wire Mat)

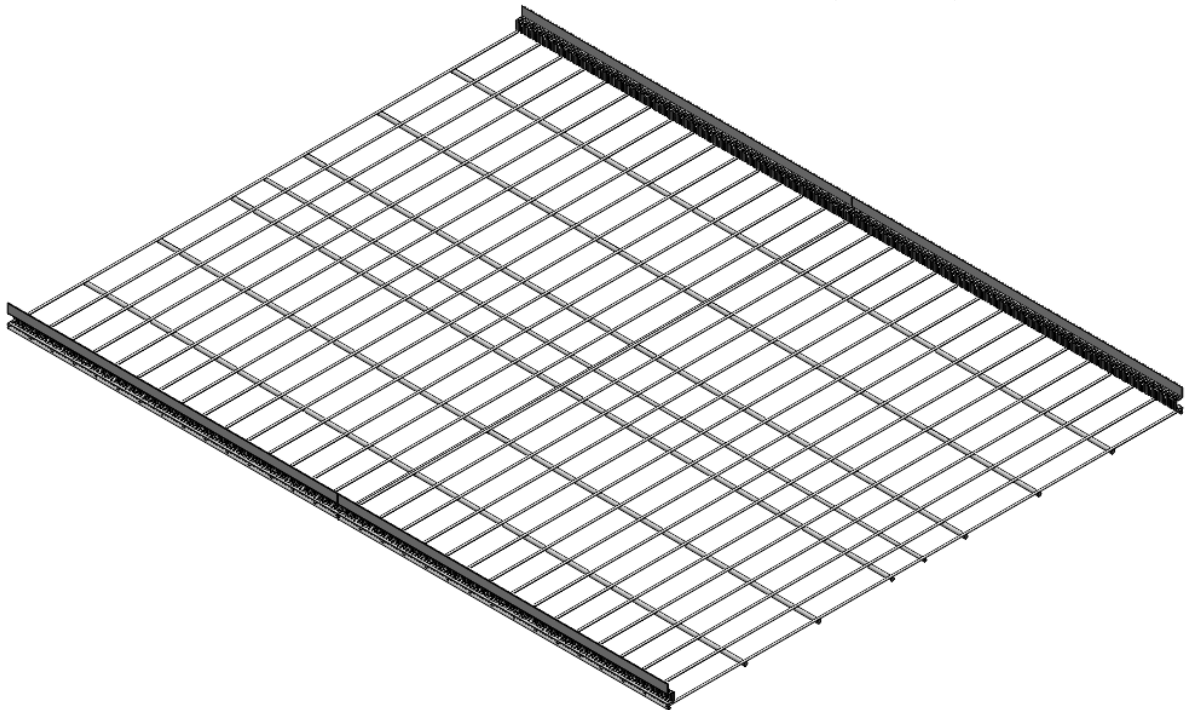

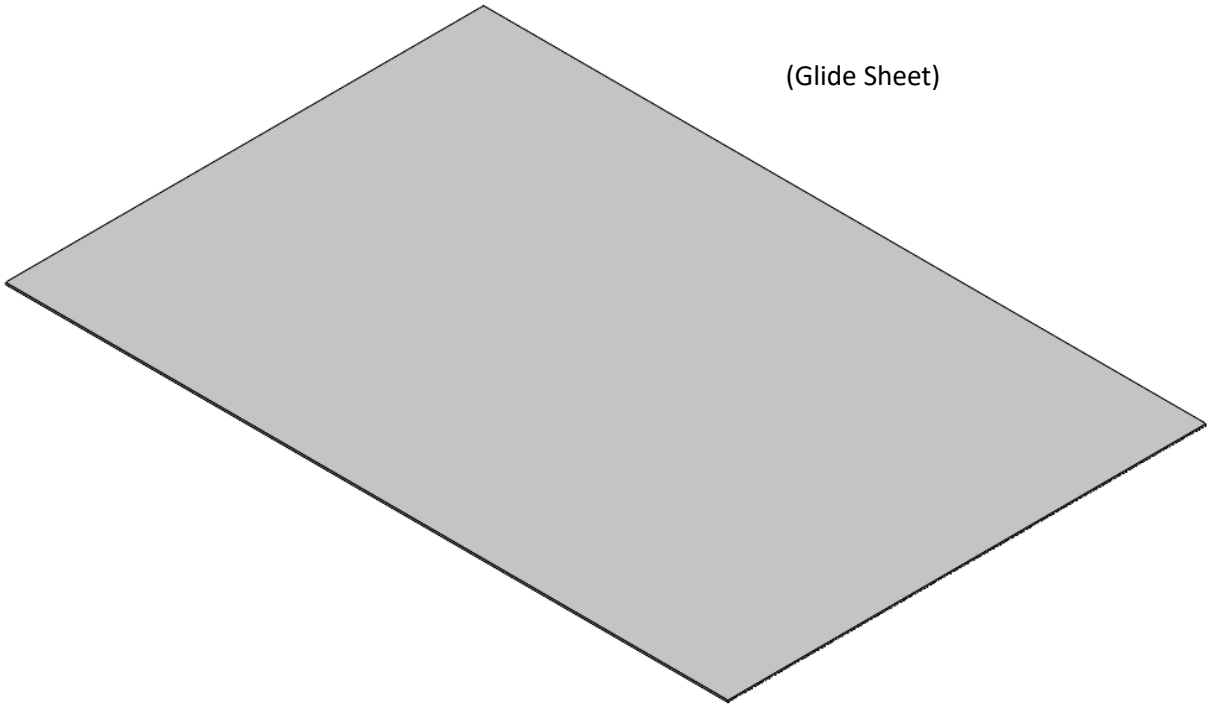


(Glide Sheet)

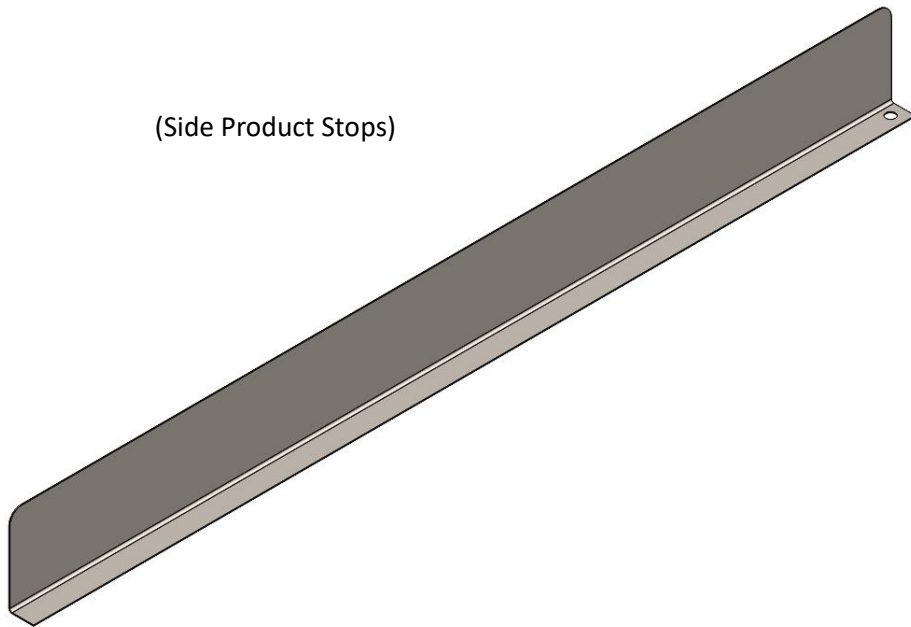


(Side Product Stops)


(Inner/ Lane Dividers)

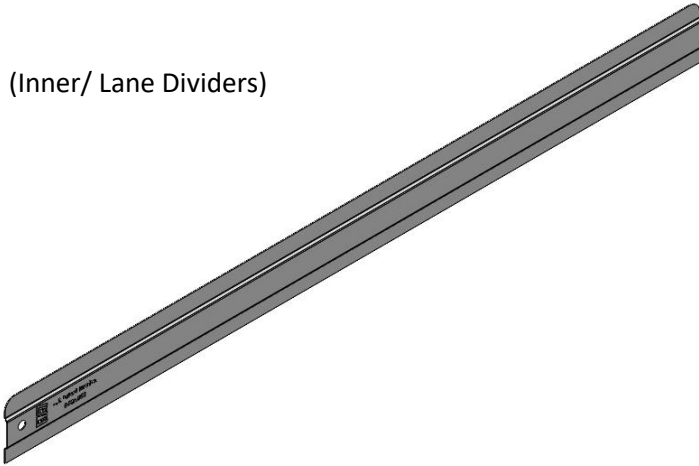


Rounded Side Up

(Front Price Tag Molding w/Plexi Holder)

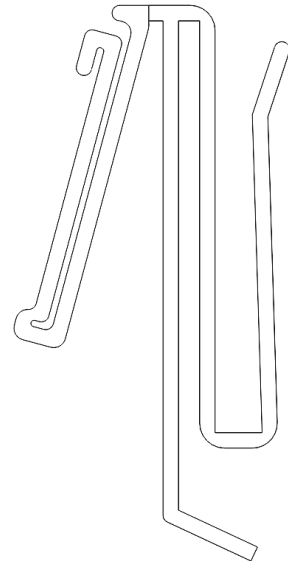


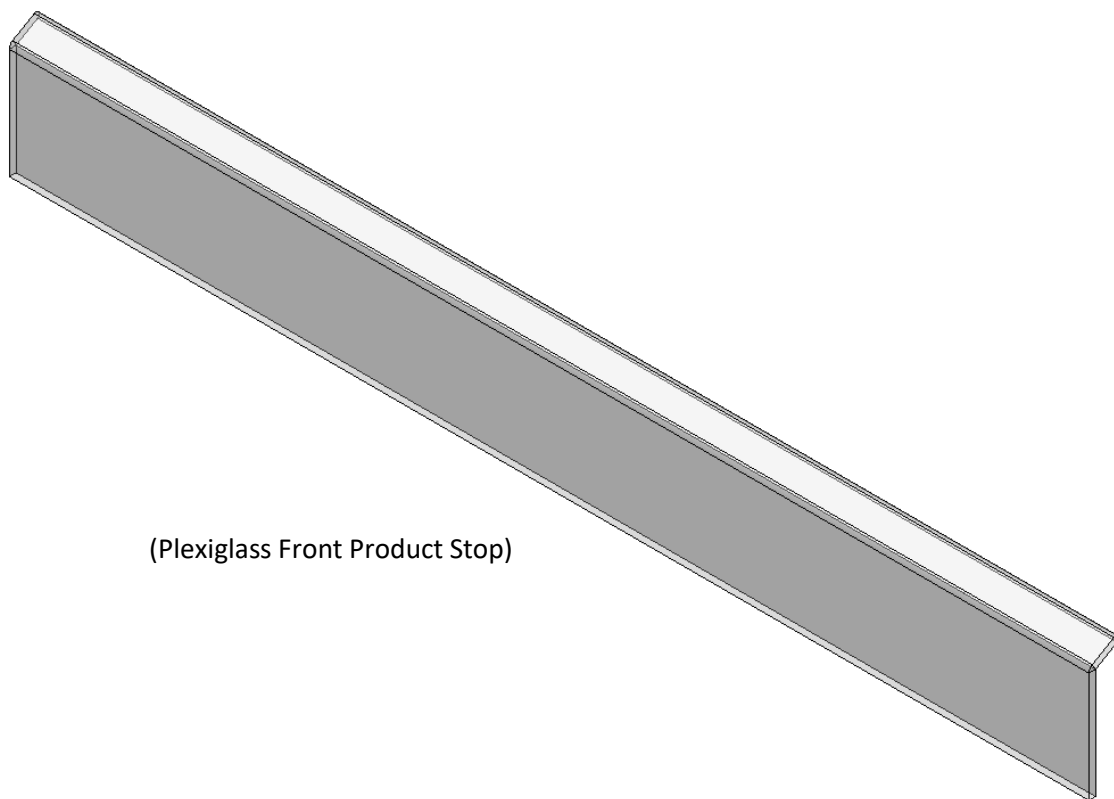


(Plexiglass Front Product Stop)

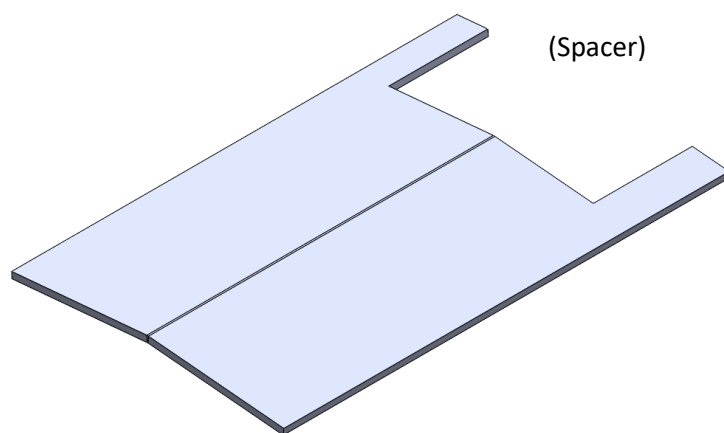


(Spacer)

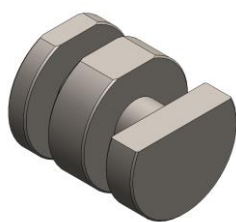

Shelf Clamp

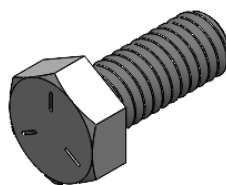




5/16" Bolt

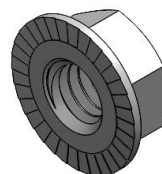

5/16" Wiz Nut


Step 1: Tighten with fingers, leave just finger tight until the end. Do **NOT** tighten with wrench until the end. Suggested location of sway braces are Bottom Front & Bottom Back. **2 x 3" Sway brace per section.**

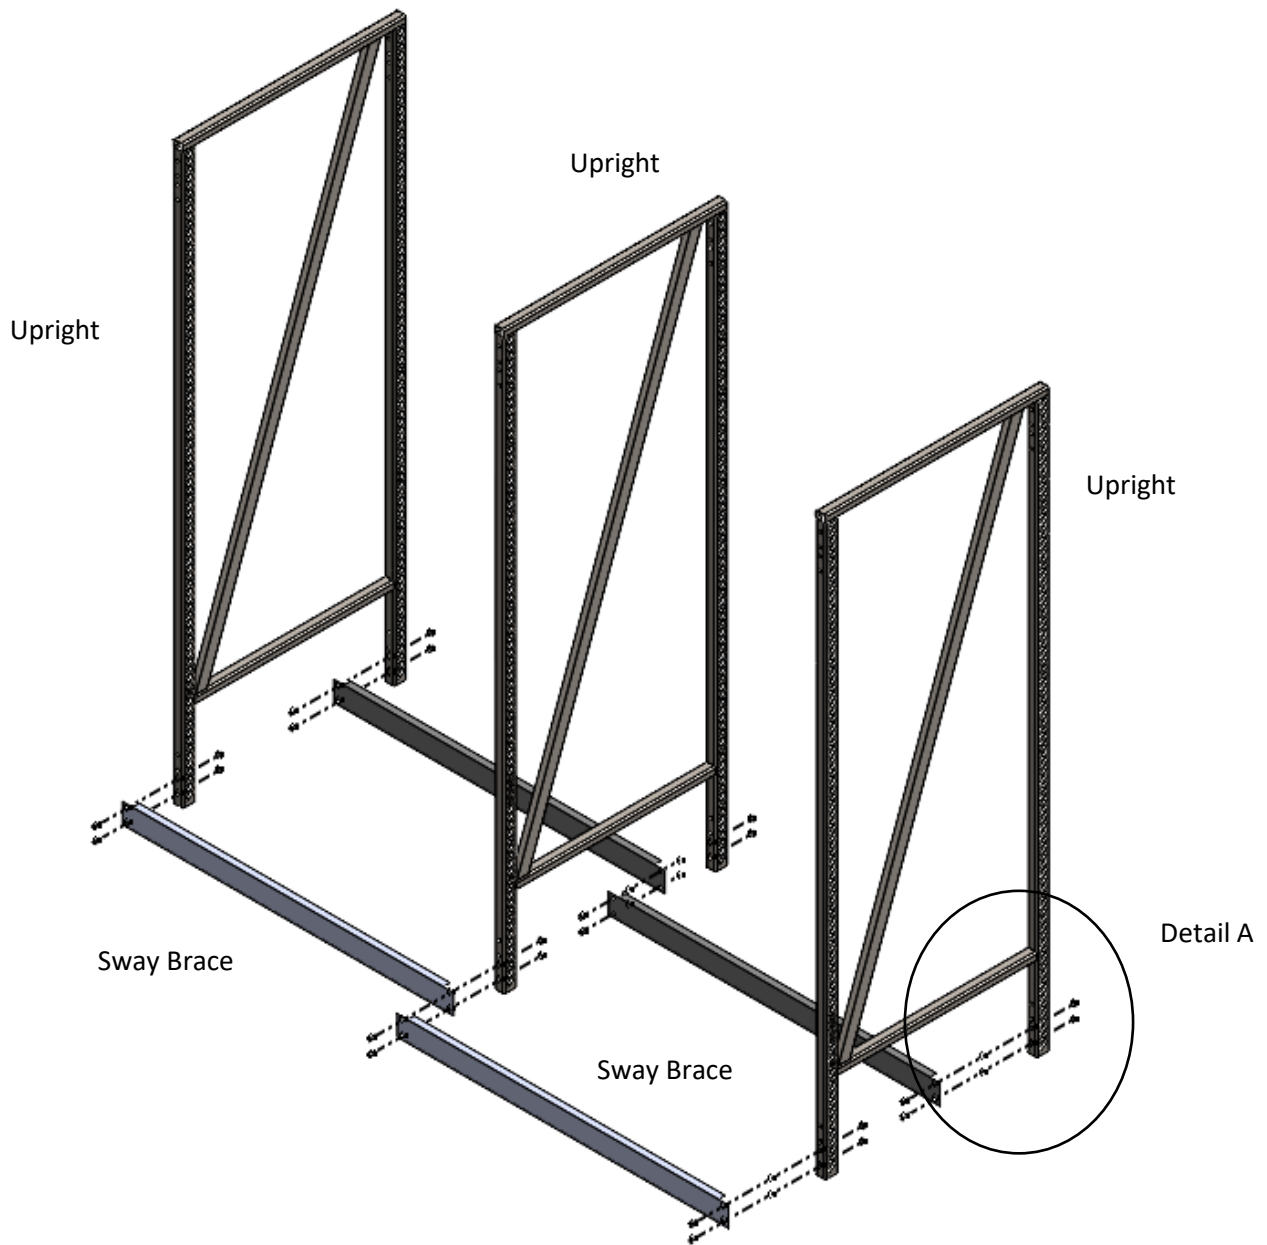

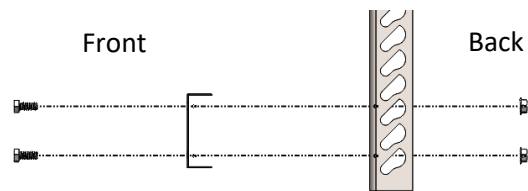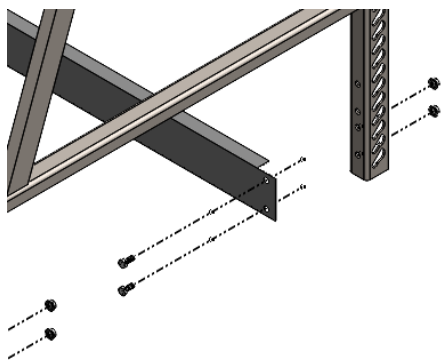

Detail A

Step 2: Use spacers to set the clearance from the Frame to the wall.

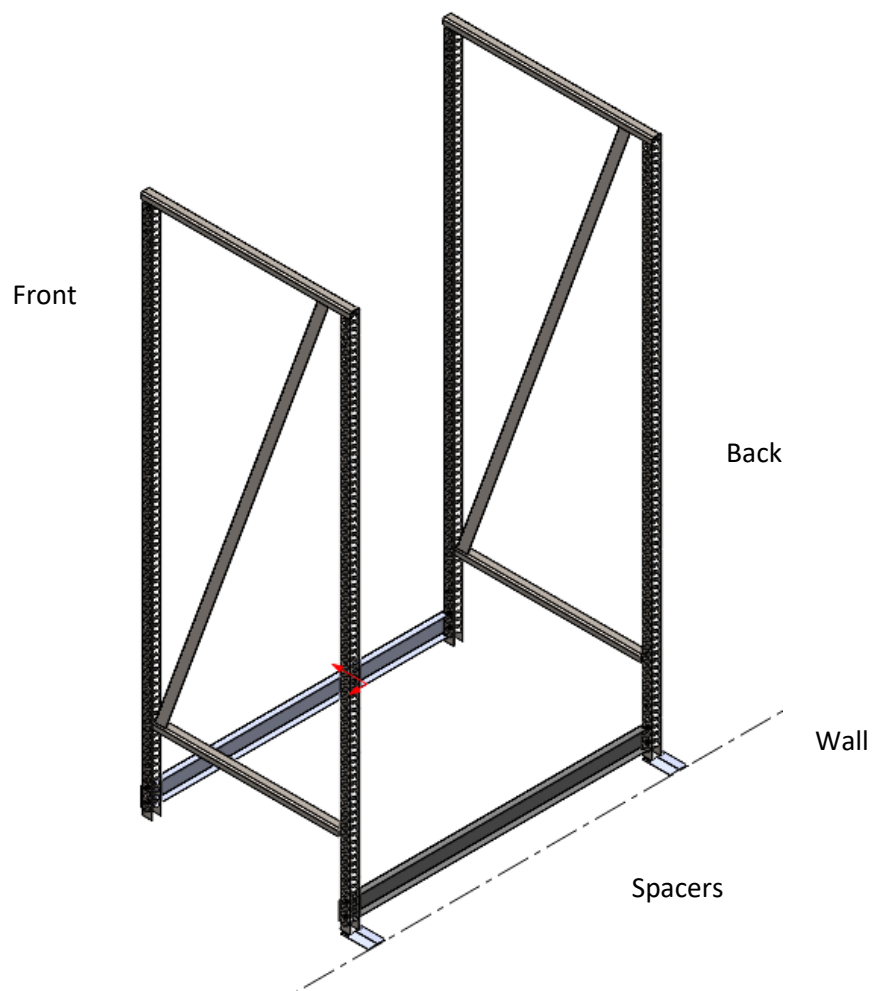


Step 3: Set Shelf clamps on the Upright frame to attach the Shelves.




Depth	Notches Separation
27"	3
36"	4
48"	5

Step 4: Install top and bottom shelf frames **ONLY**. Use level to make sure rack is plumb.


Shelf Frames

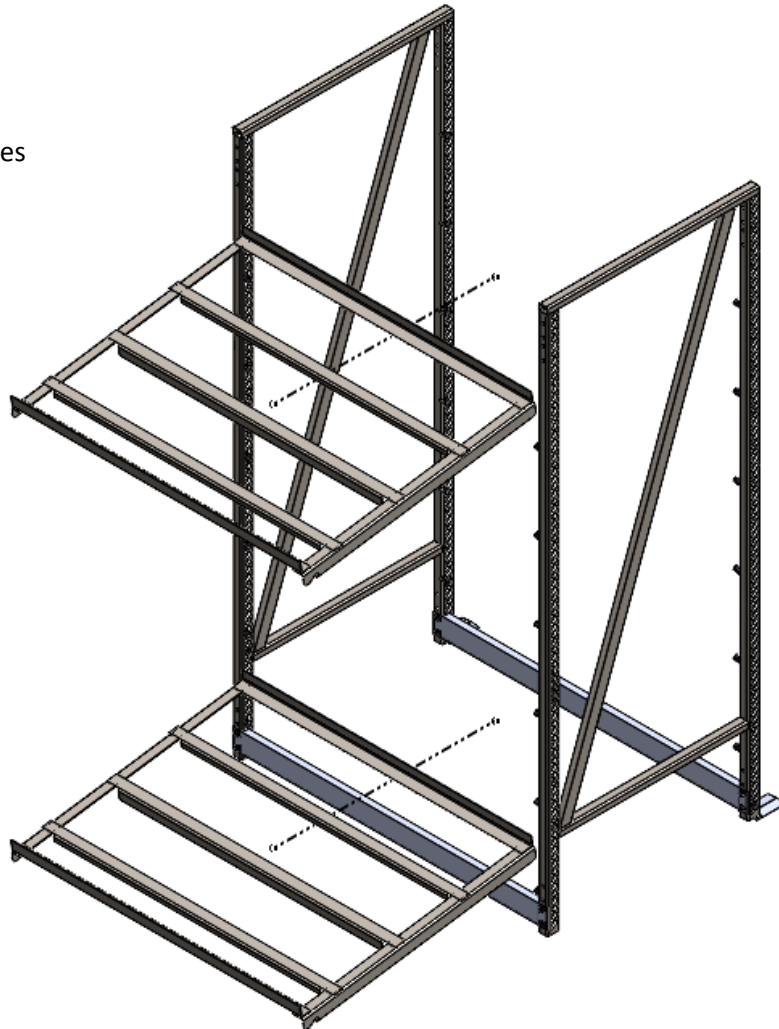


Front

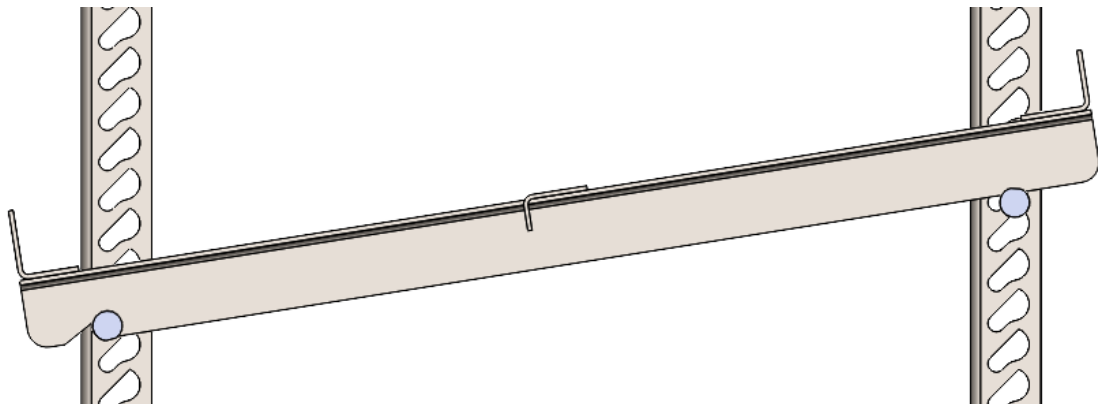

Back

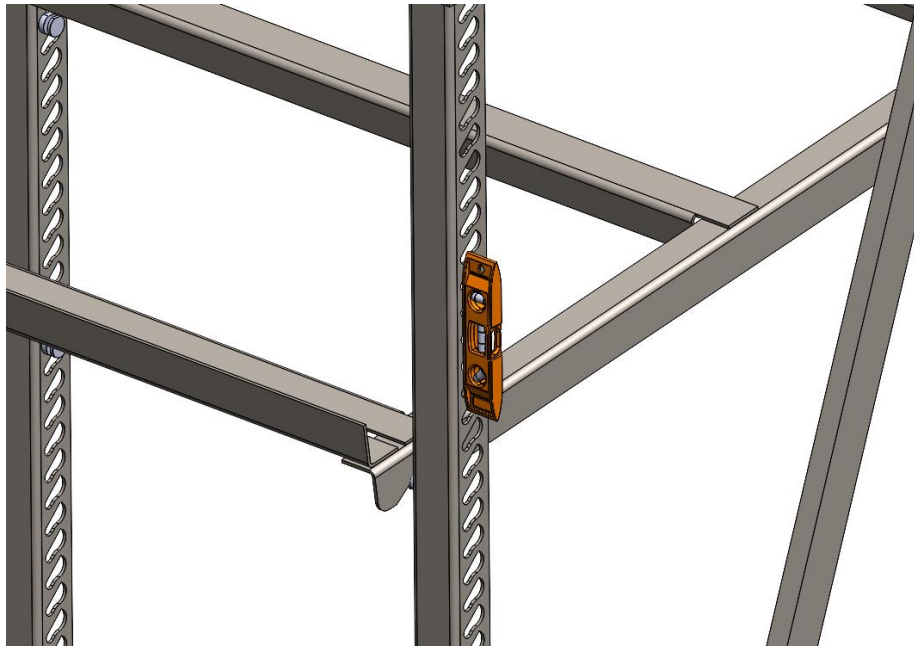


Step 5: **Tighten** all the bolts and nuts using the wrenches.

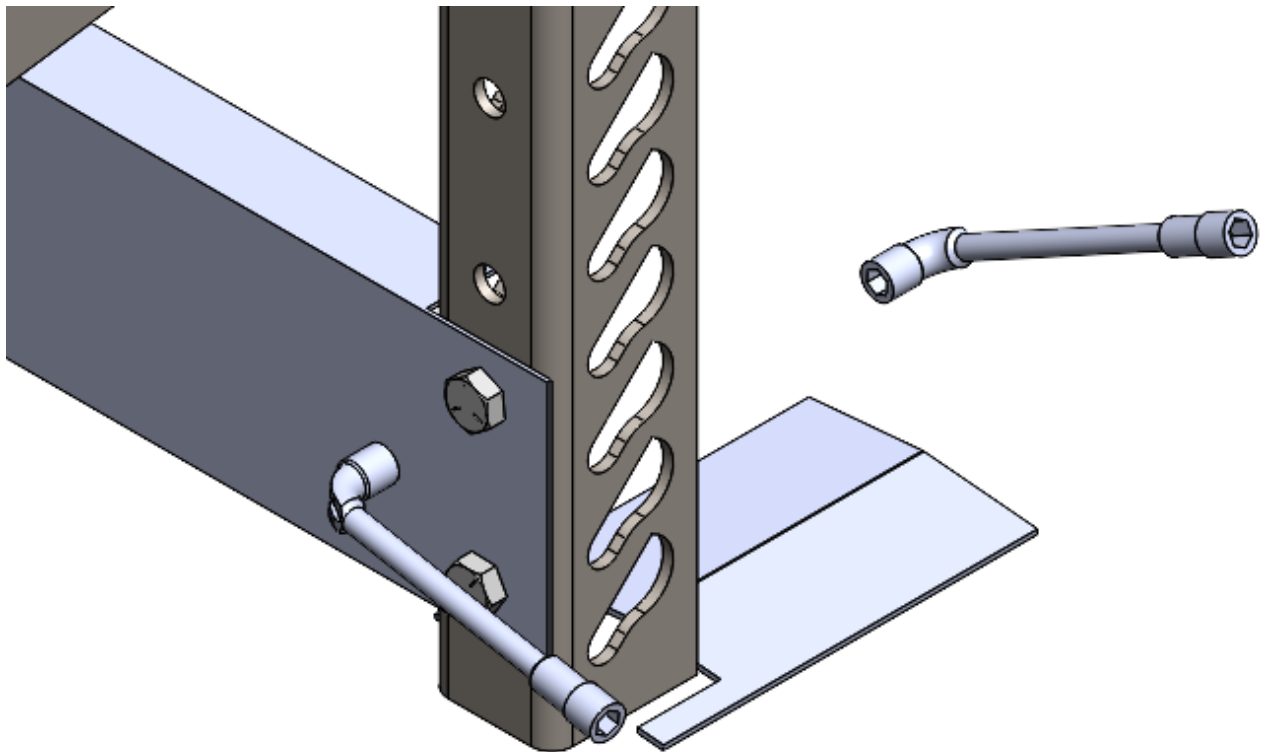


Step 6: Install remaining Shelf Frames.


Shelf Frames

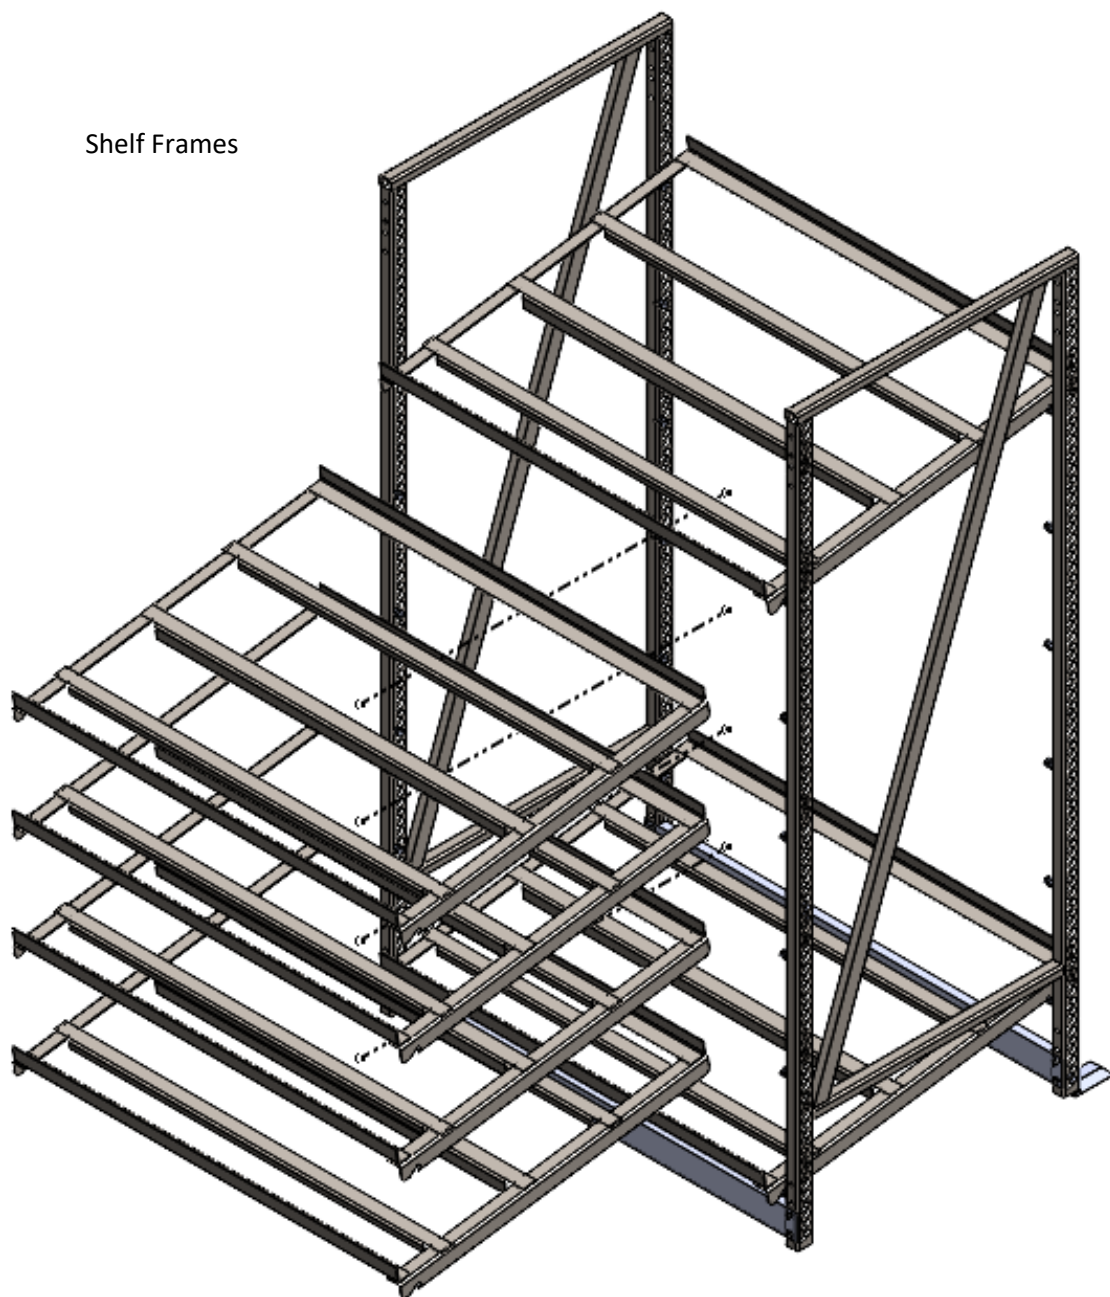


Step 7: Install Front Tag Molding & Side Product Stops.

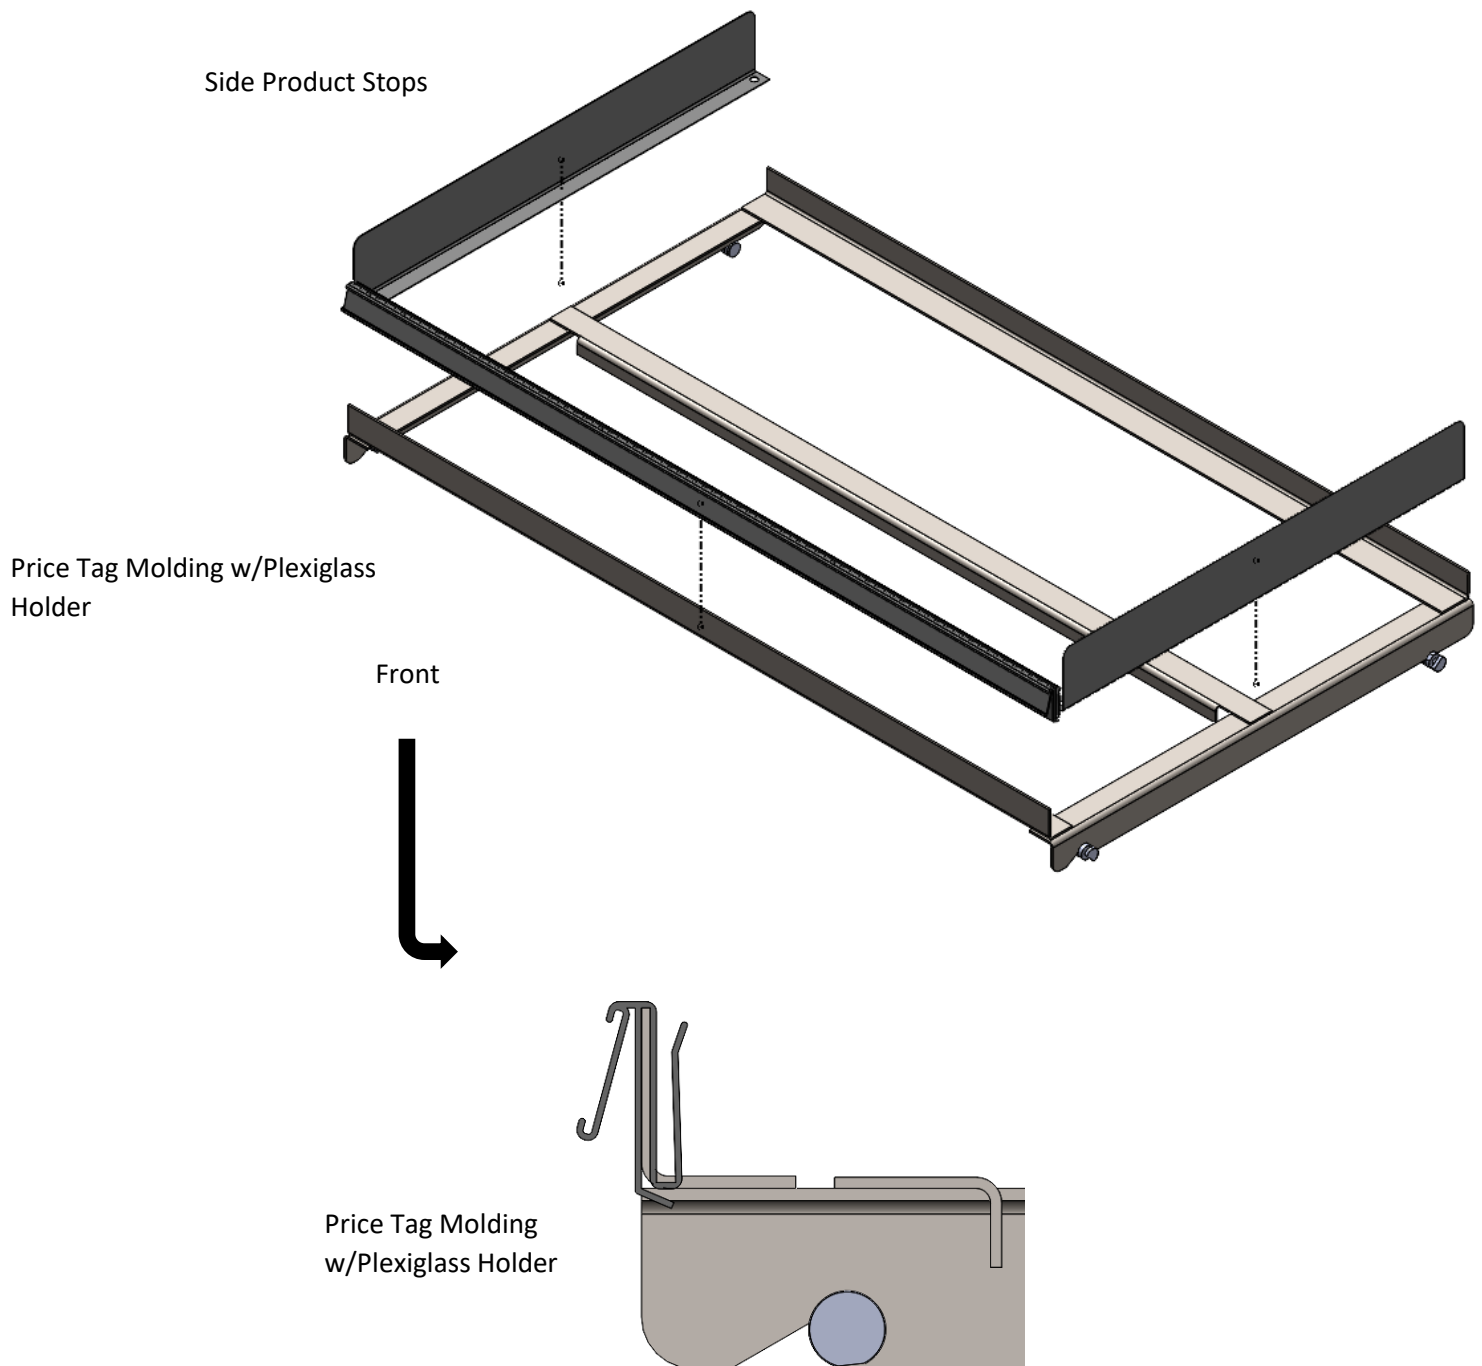


Step 8: Set Wire mat on the Side Product Stops. Then add the glide sheets.

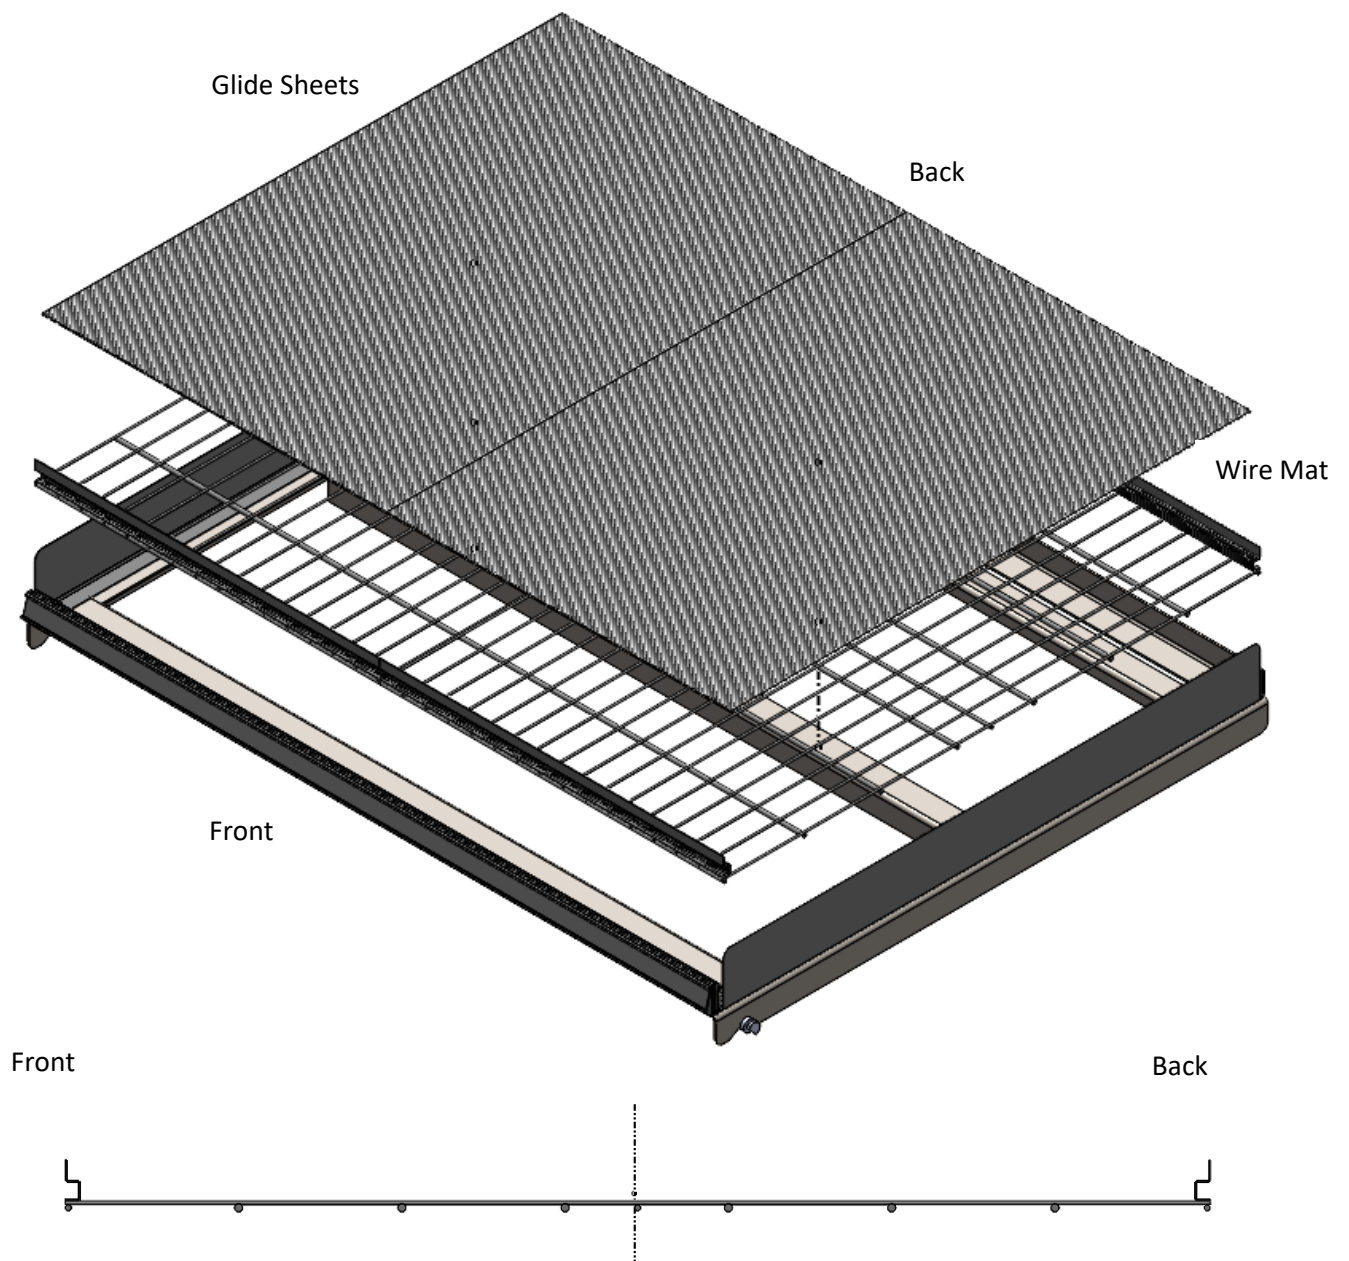

Step 9: Install Lane dividers as needed based upon product displayed.


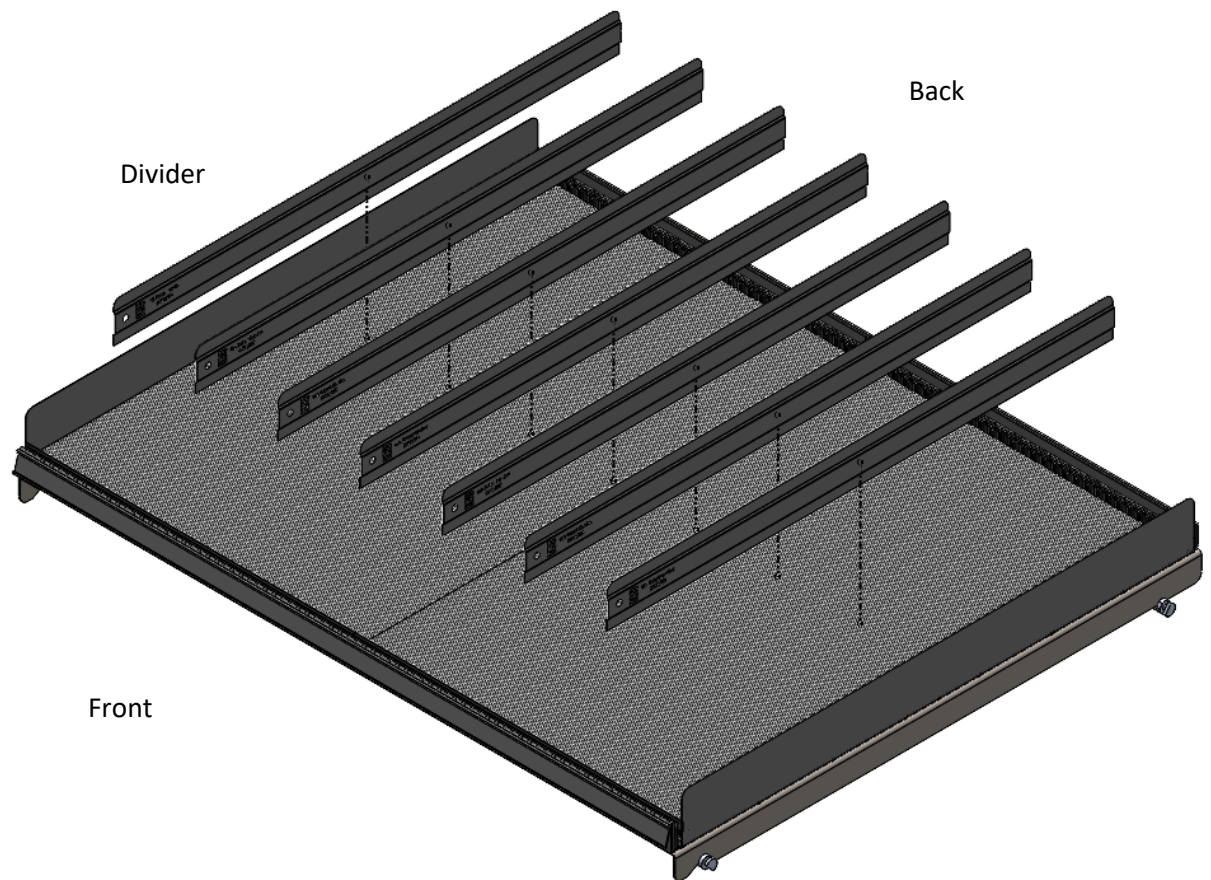


Dividers to be secure in the slots, round side must be up and all indents must go the same way in each shelf

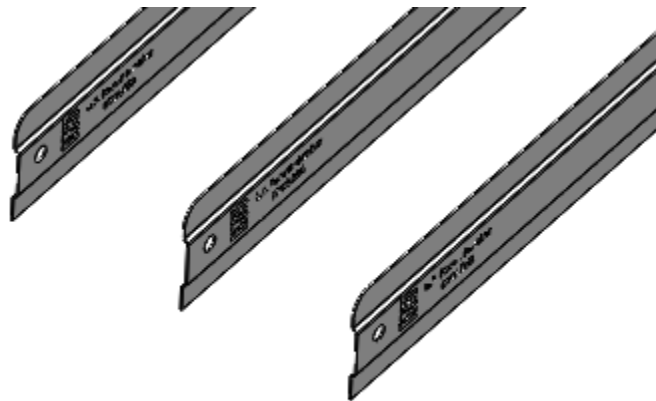

Laying two products down in each lane is a helpful way to set lane dividers.

Step 10: Install Plexiglass front product stop into the Front Price Tag Moldings w/ Plexi Holder slots.

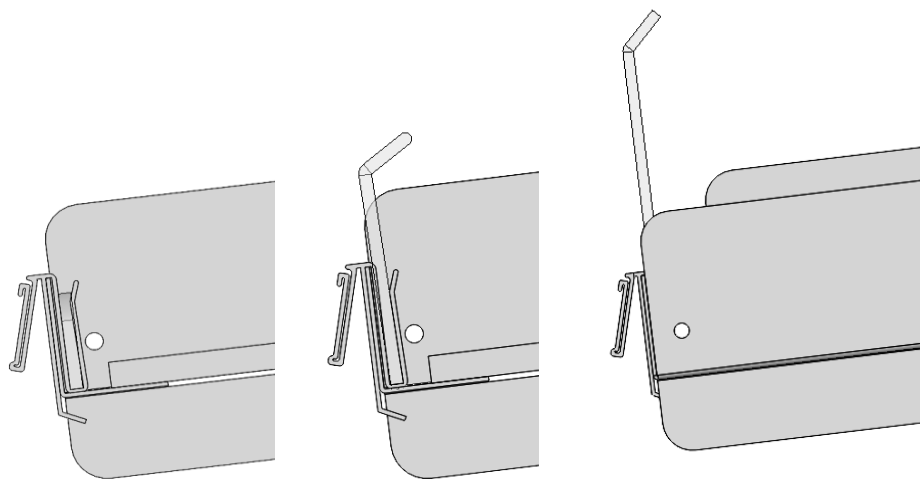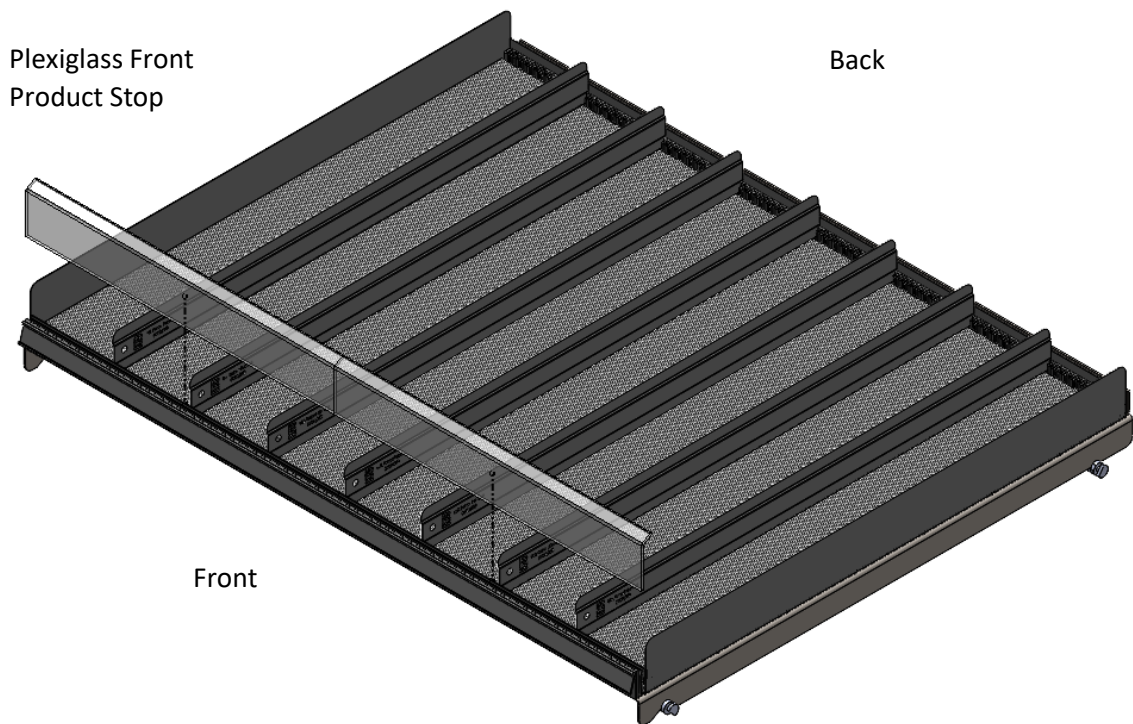

Filler

Standard

Tall (6 Inches)

Completed Assembly:



Questions?

Call Customer Service...800-323-2517