

VERSARACK + VERSAROLLERSHELF®

ASSEMBLY GUIDE



Intertek

Sanitation Listed
Certified to NSF/ANSI 2 by Intertek

-Size of parts will differ depending on customer's order.

-Quantity of parts might differ depending on customer's order.

NEED:



Two people
needed



1/2" Wrench & Ratchet with
1/2" Deep Well Socket




Level




Utility
Gloves


PARTS LIST

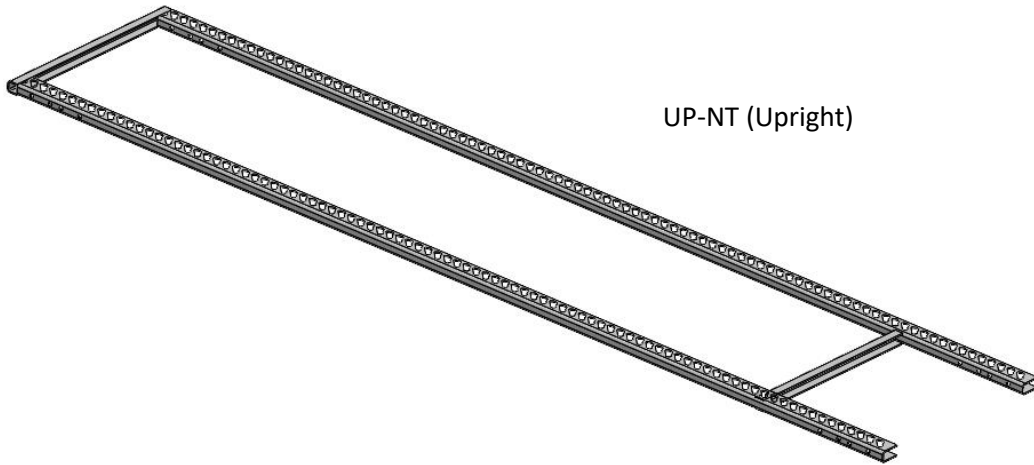


UP-NT (Upright)

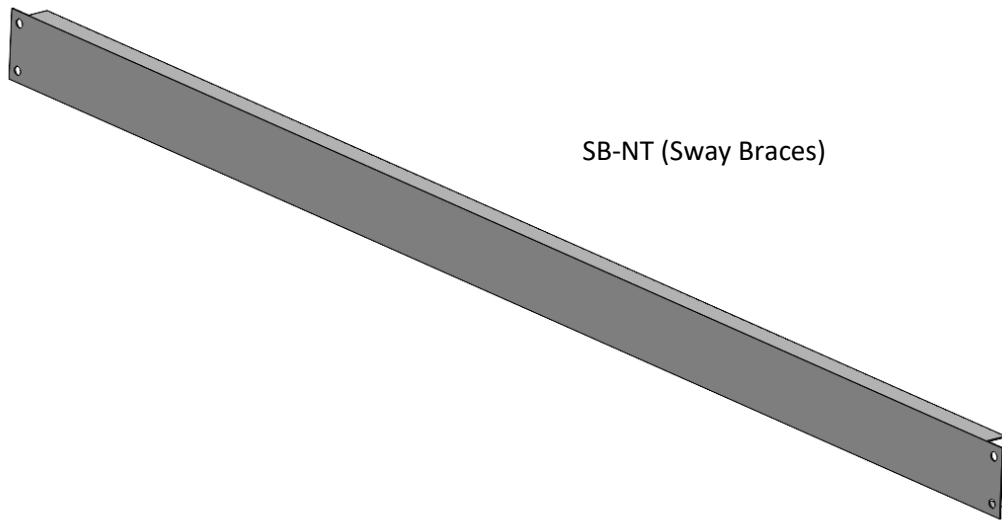


SB-NT (Sway Braces)

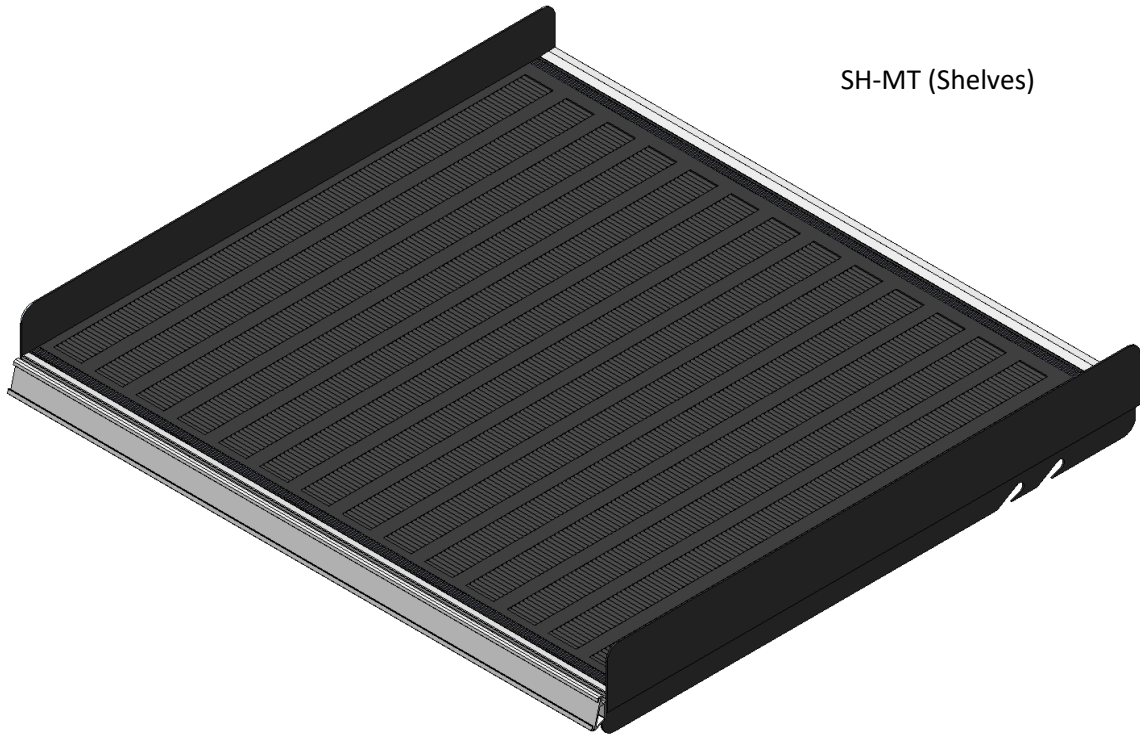


SH-MT (Shelves)

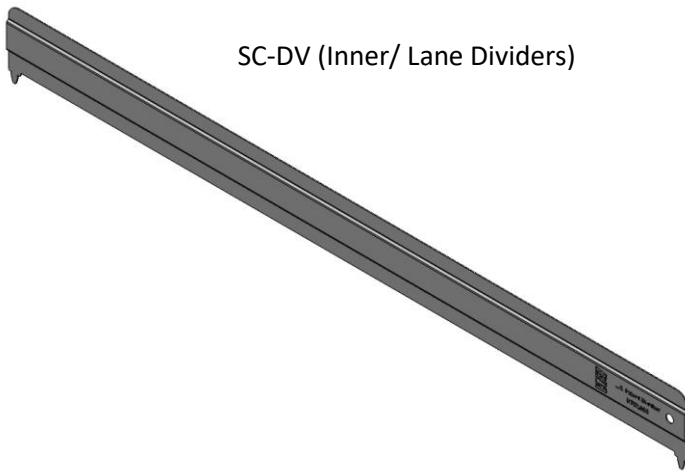


SC-DV (Inner/ Lane Dividers)

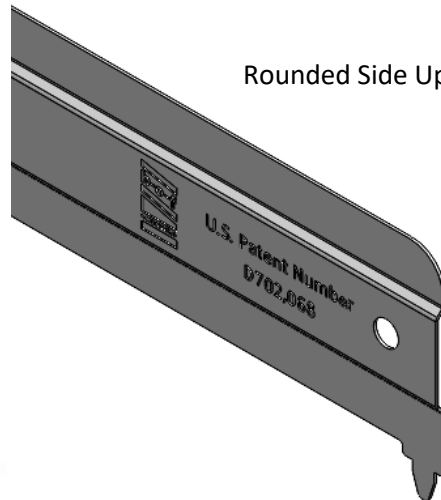

Rounded Side Up

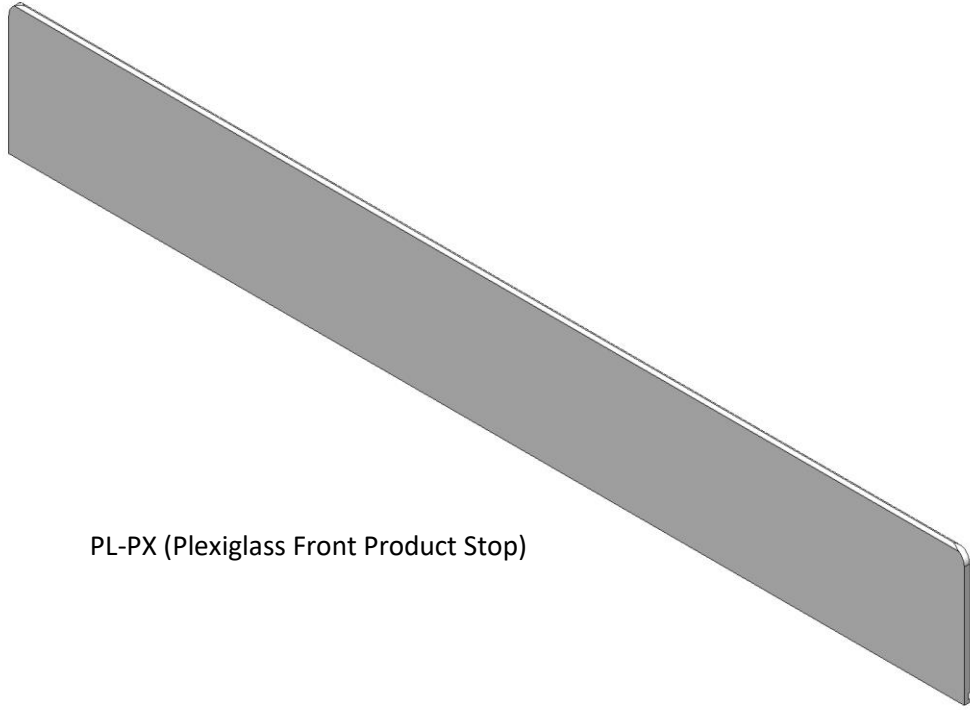


PL-PX (Plexiglass Front Product Stop)

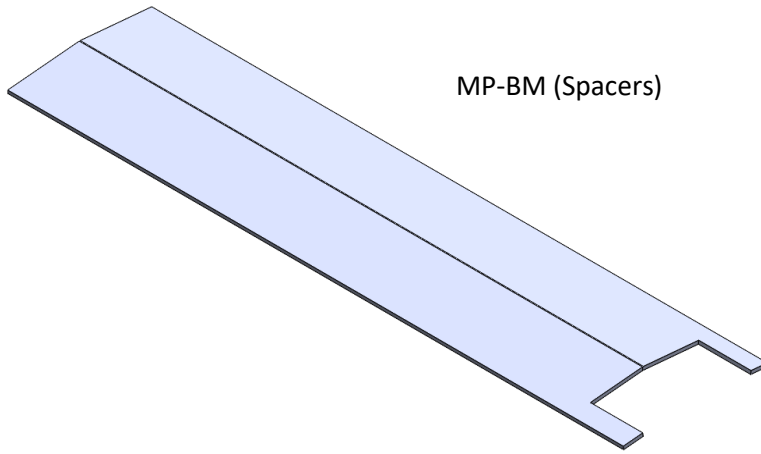


MP-BM (Spacers)



MH-CL
(Shelf Clamps)

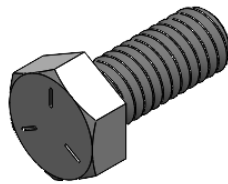



MH-BT
(5/16" Bolt)

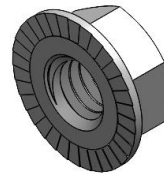



MH-NT
(Wiz Nut)

Step 1: Tighten with fingers, leave just finger tight until the end. Do **NOT** tighten with wrench until the end. Suggested location of sway braces are Top Front and Bottom Back. Each section must have 6 inches of sway brace.

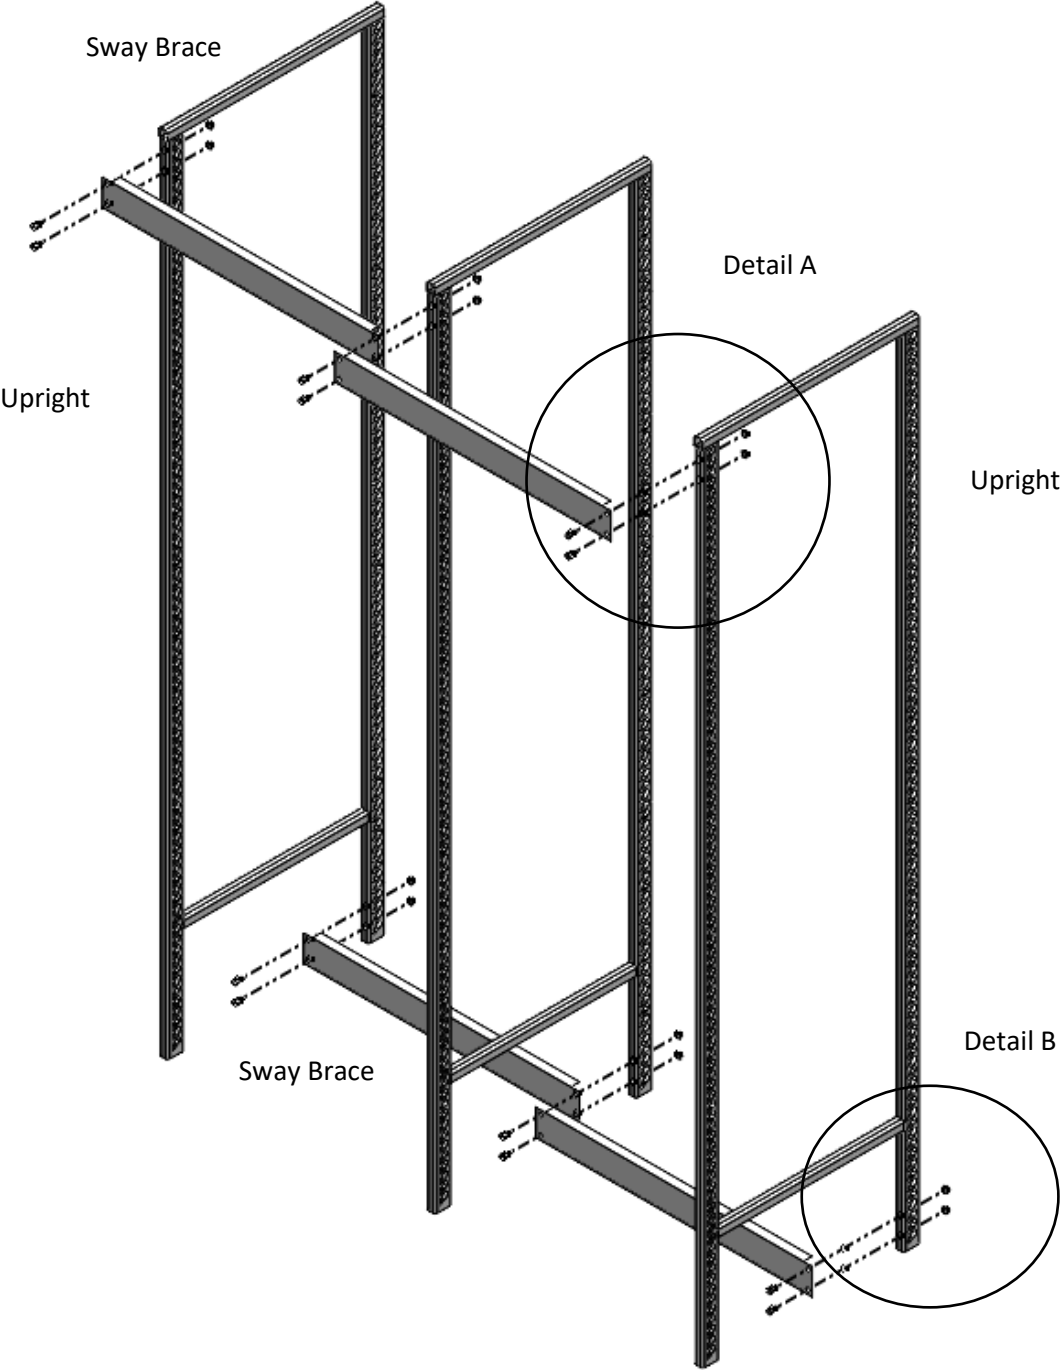


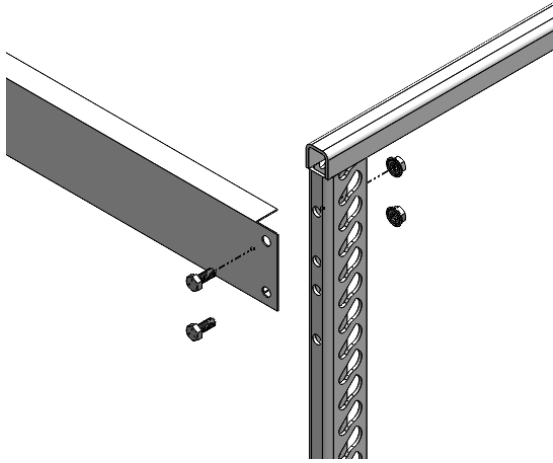

Detail A

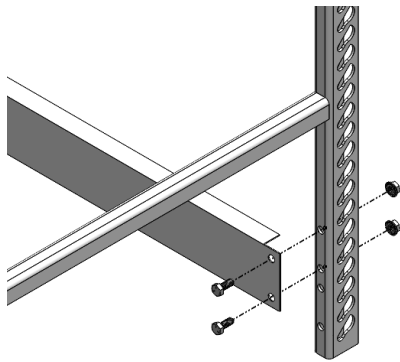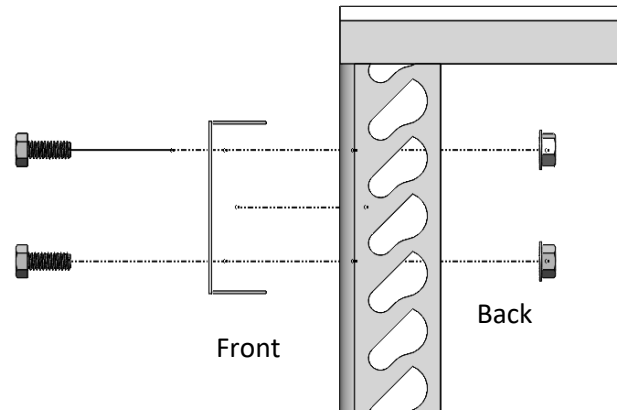


Detail B

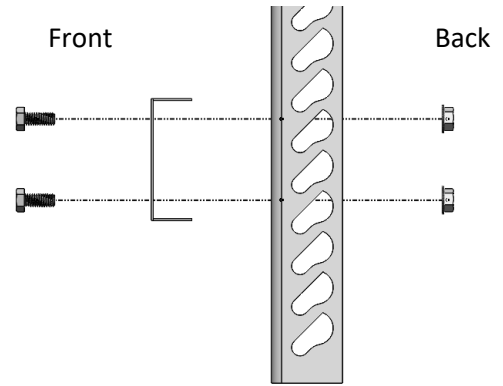


Door frames are done in 2, 3, 4 & 5 door sections, 5 is the maximum number of doors per section. Shelving frames must follow the door frames. The division between door frames will be seen by looking for a T-bar from the customer side of the doors, or by looking for where you see two lights on the merchandise side of the doors.


Front View

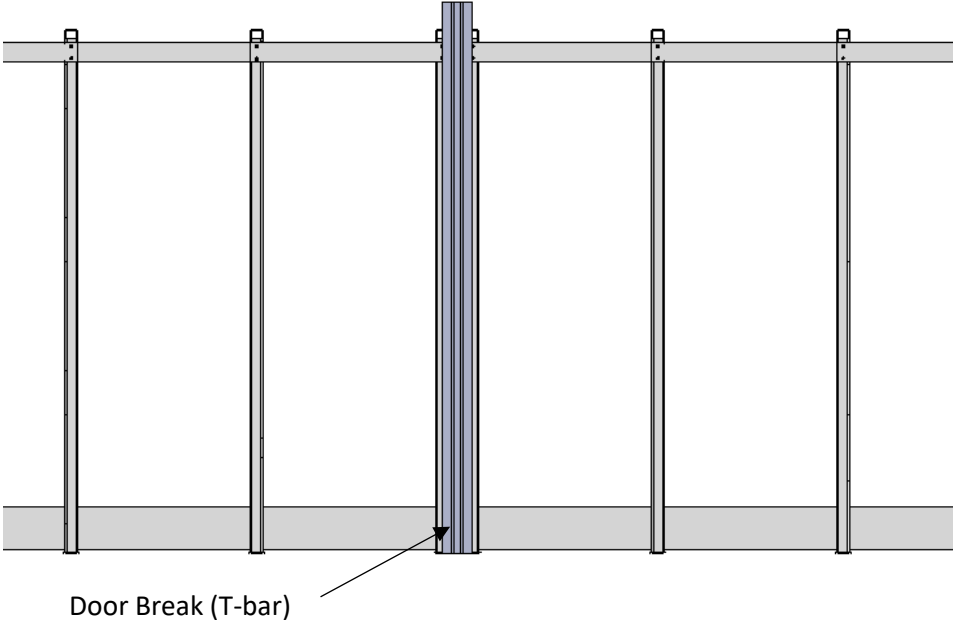


Top View

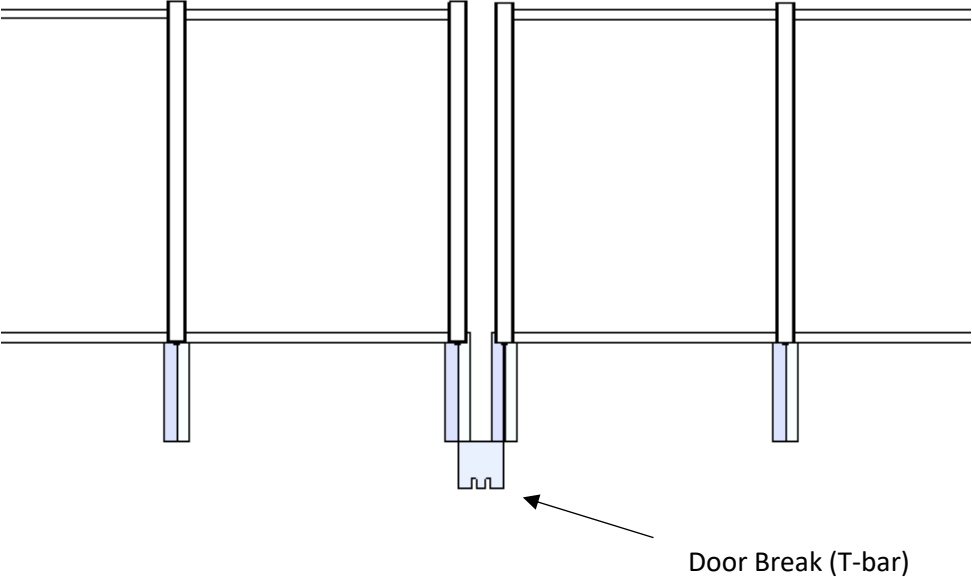


Step 2: Use spacers to set the clearance from the Frame to the door.

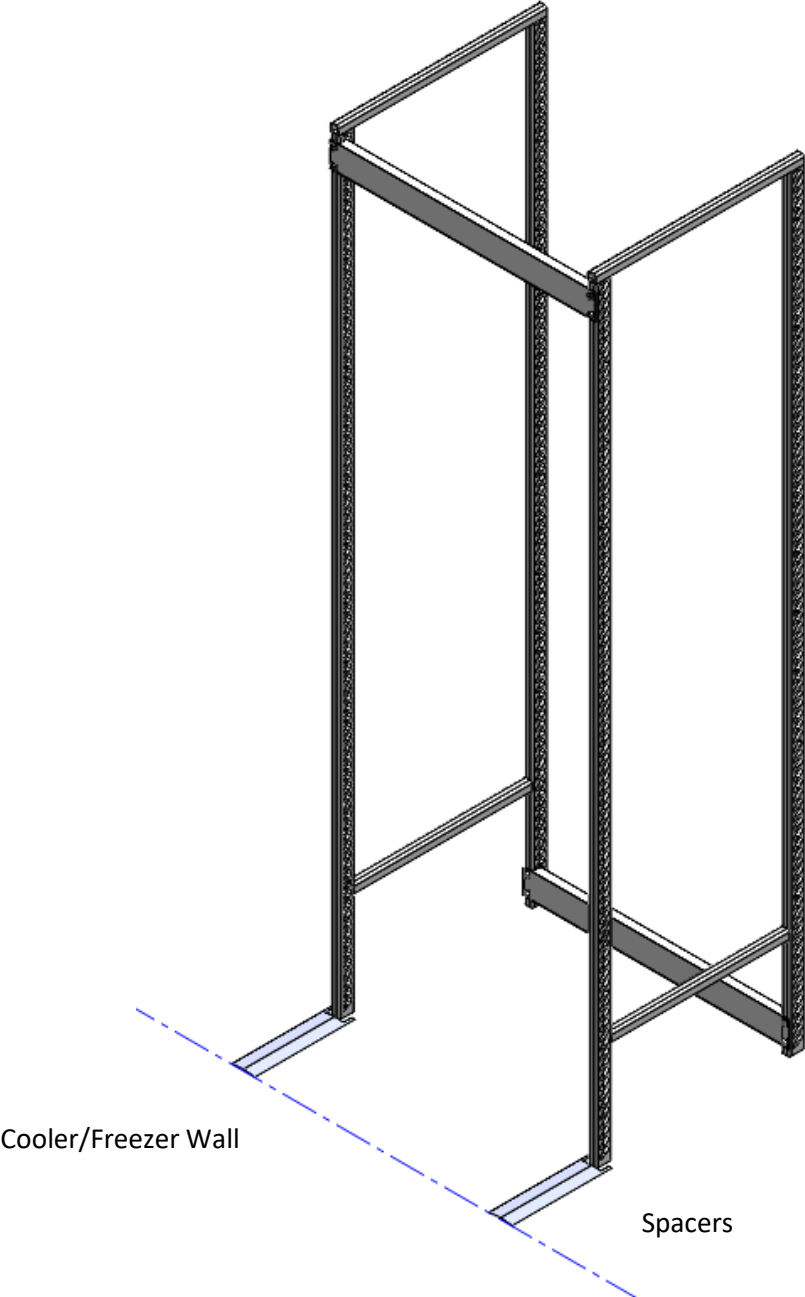

Step 3: Set Shelf clamps on the Upright frame to attach the Shelves.

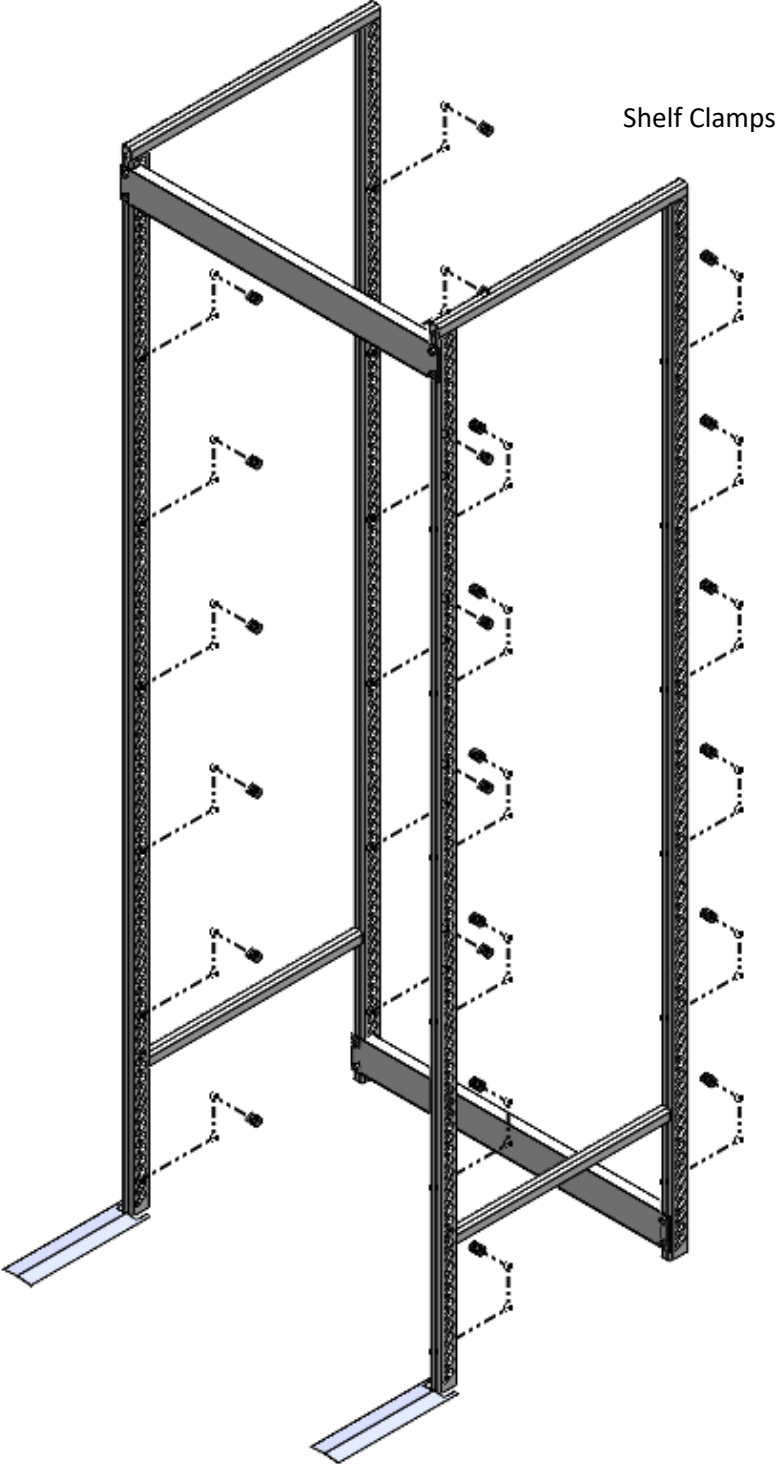

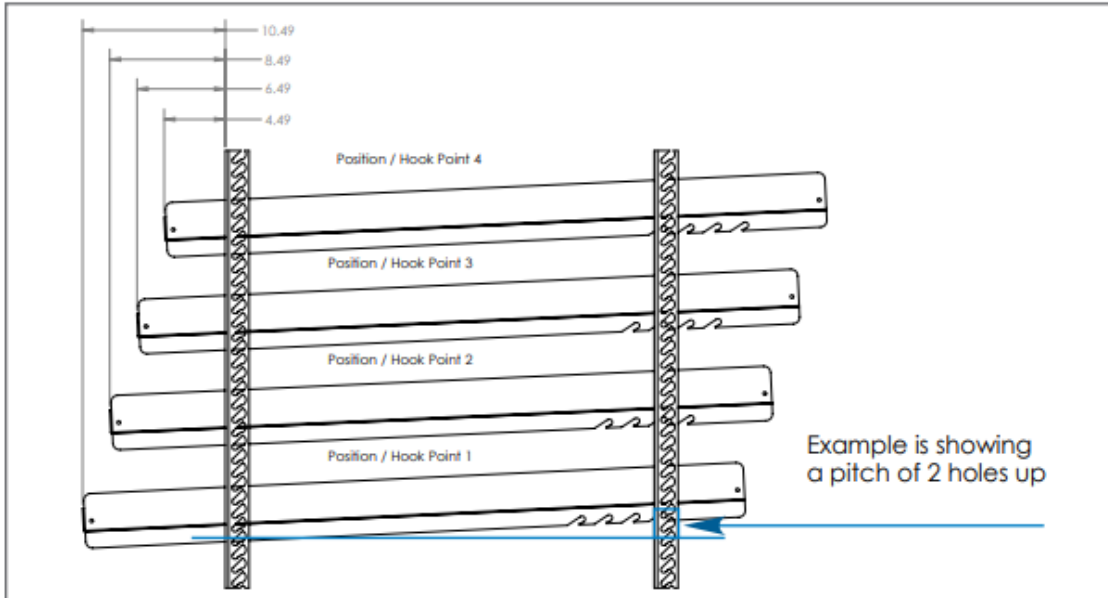


27" Shelf Depth


Product	Number of keyholes notches up
Plastic beverage	3
Carton beer	4
Cardboard water	4
Liquid dairy	3
Liquid dairy	4
Glass packaged	2

Step 4: Install top and bottom shelves **ONLY**. Use level to make sure rack is plumb.


Shelves

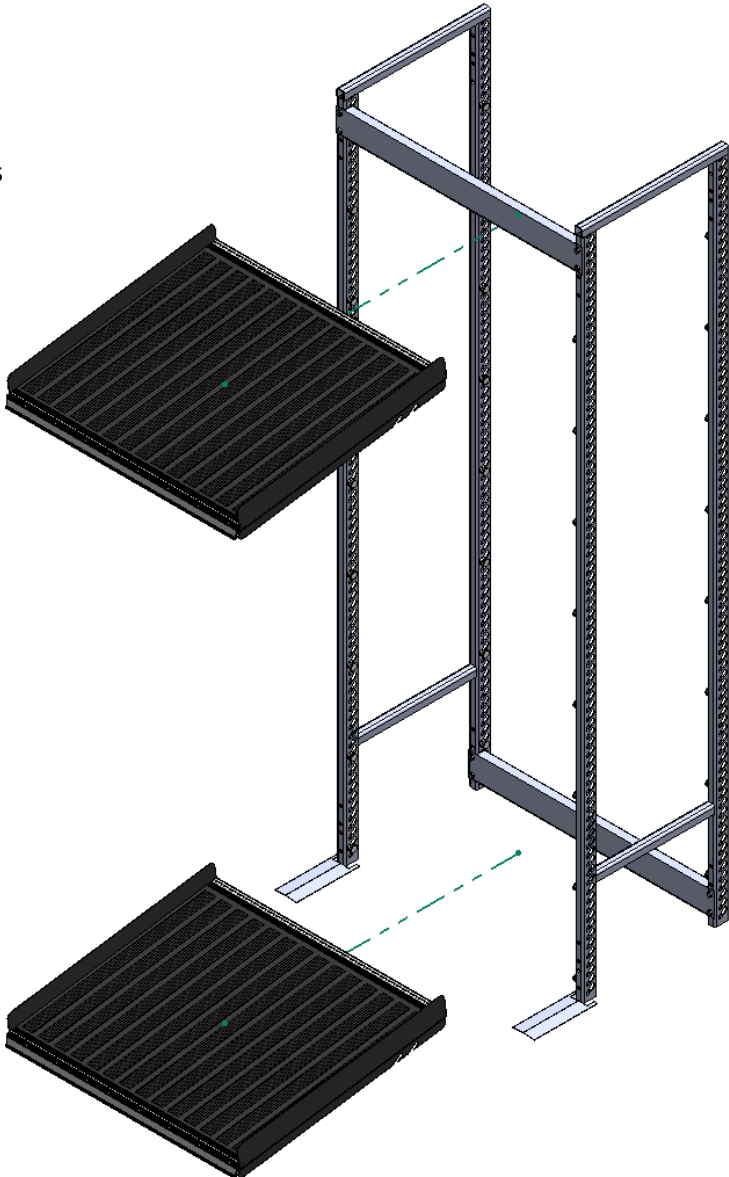


Front

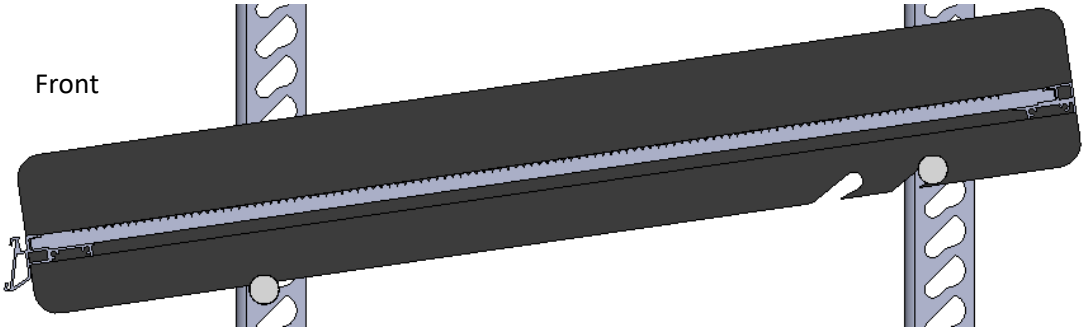


Back

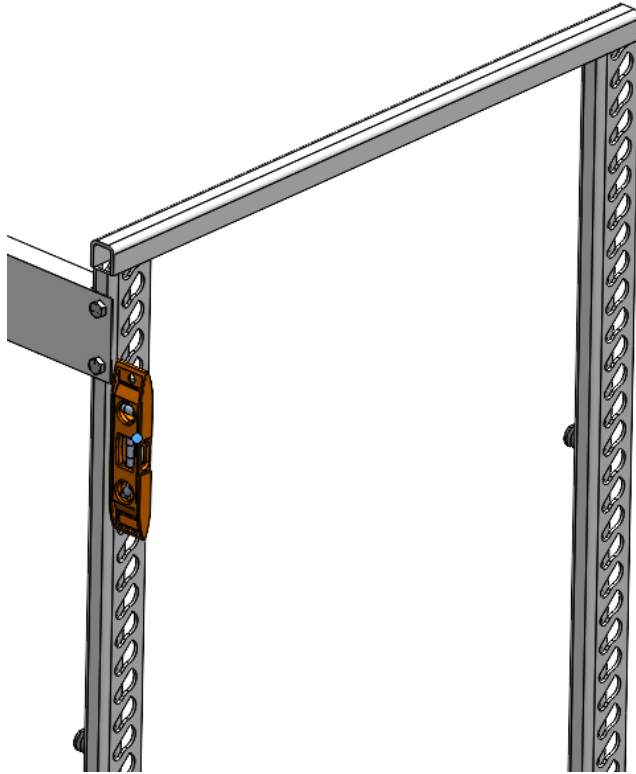


Step 5: **Tighten** all the bolts and nuts using the wrenches.

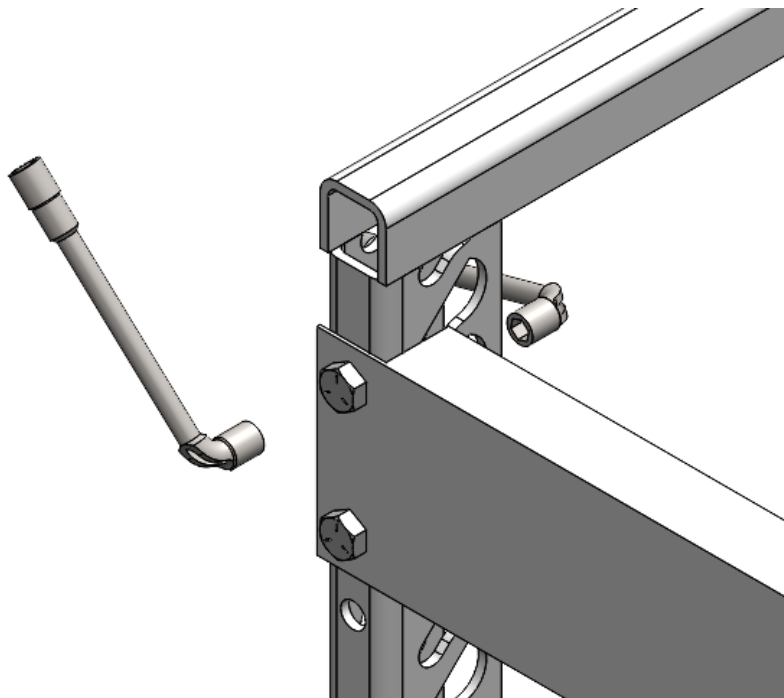


Step 6: Install remaining Shelves.

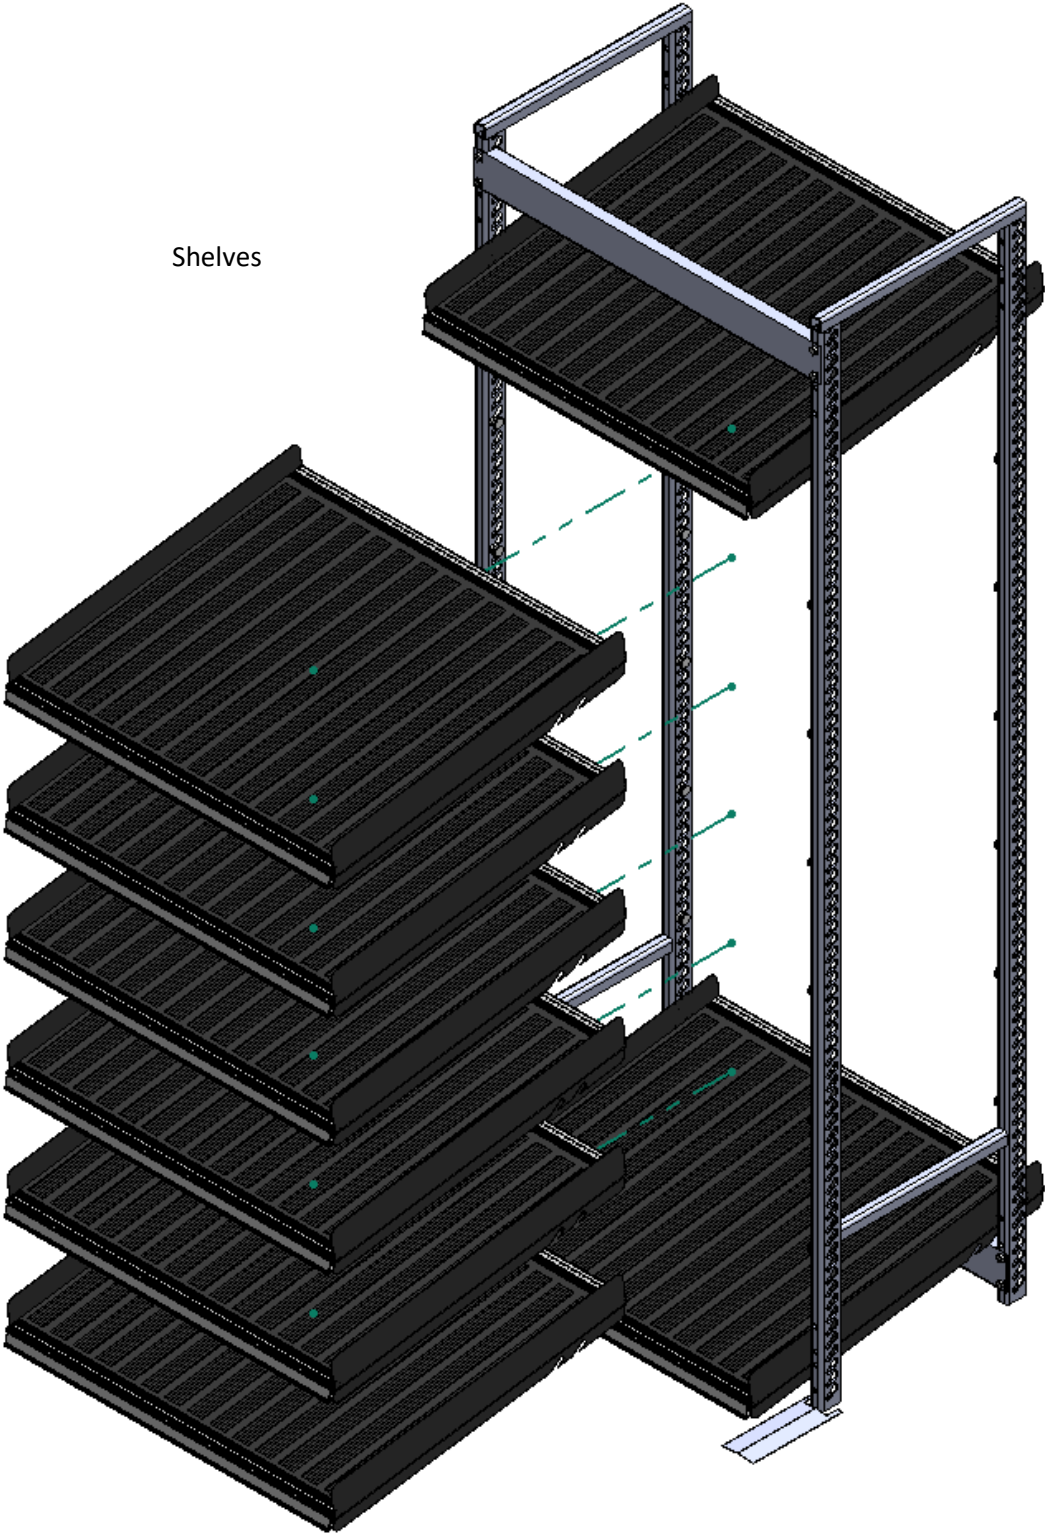

Step 7: Install Lane dividers as needed based upon product displayed.


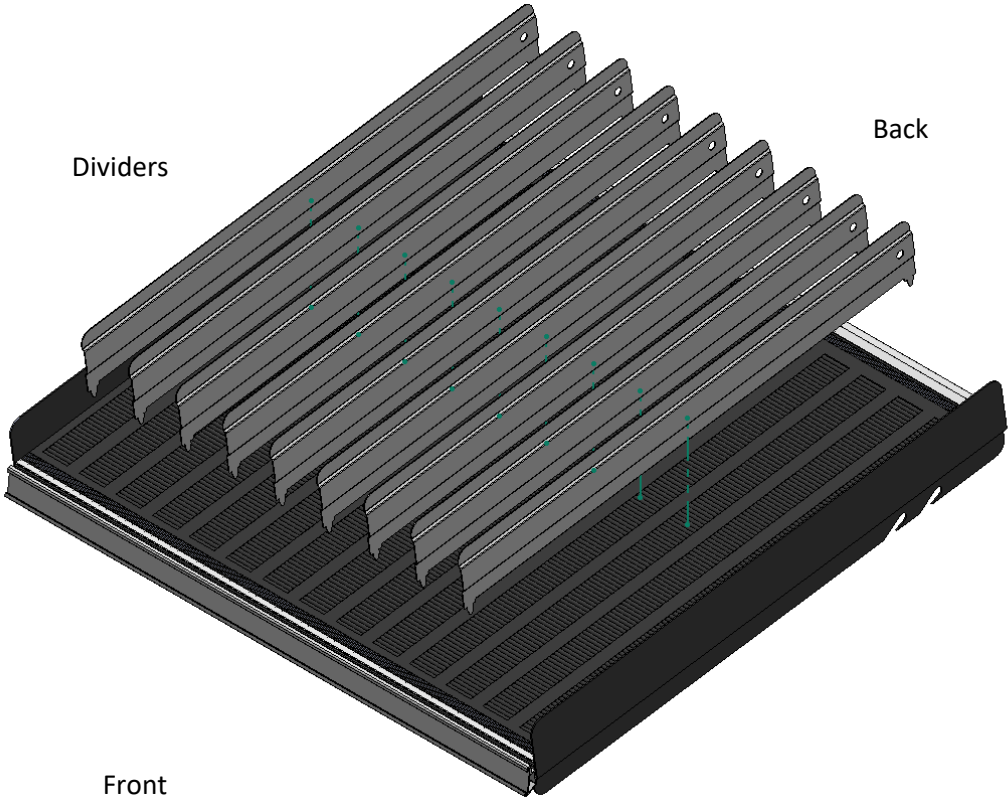


Dividers to be secure in the slots, round side must be up and all indents must go the same way in each shelf

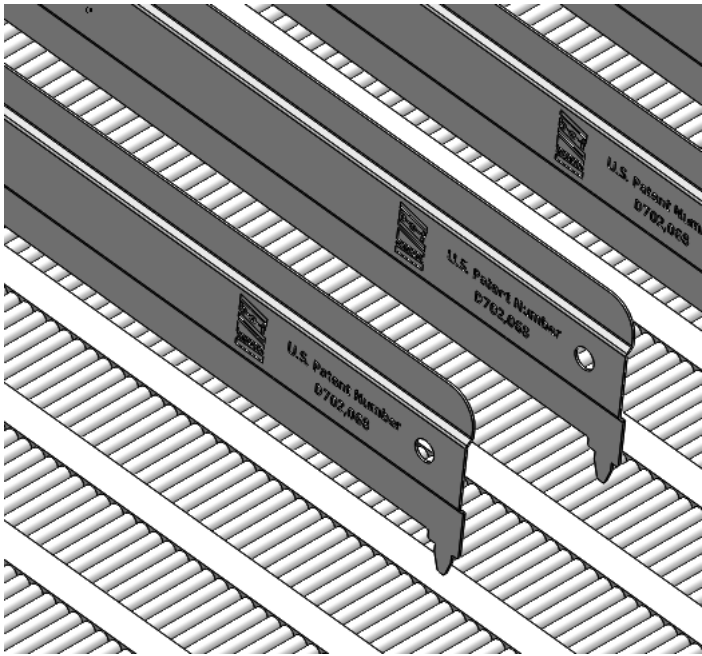


Laying two products down in each lane is a helpful way to set lane dividers.


Step 8: Install Plexiglass front product stop into the Front Price Tag Moldings by sliding it on the side.

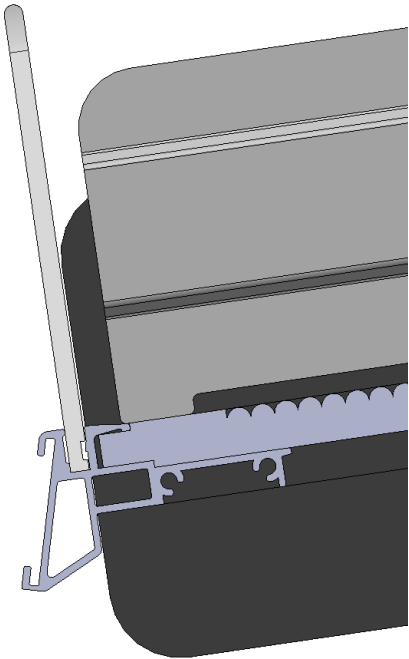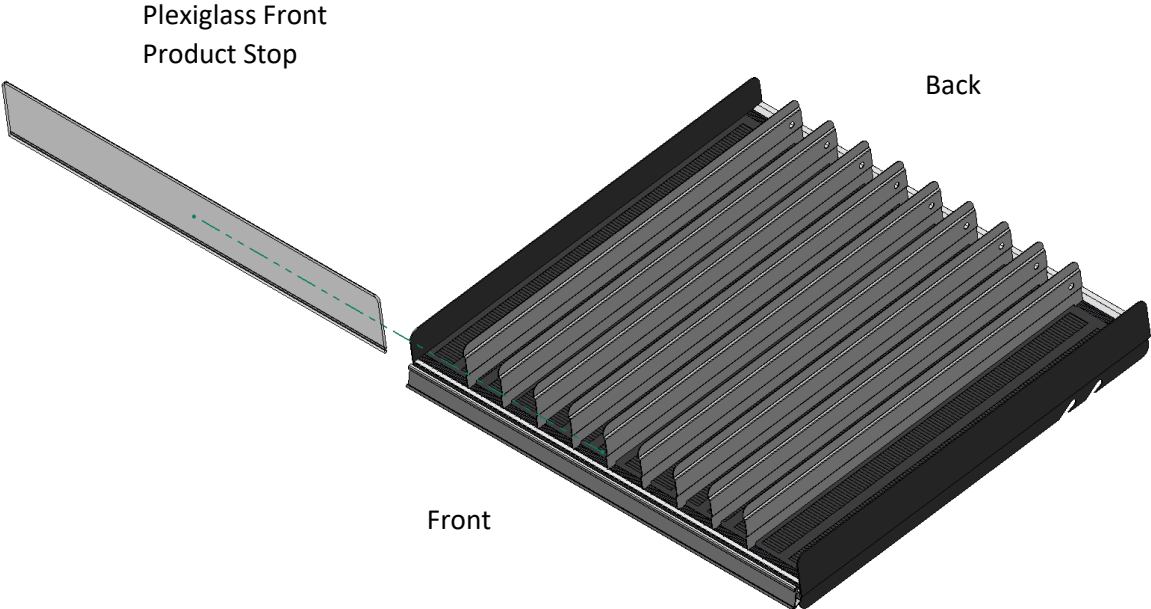

Completed Assembly:

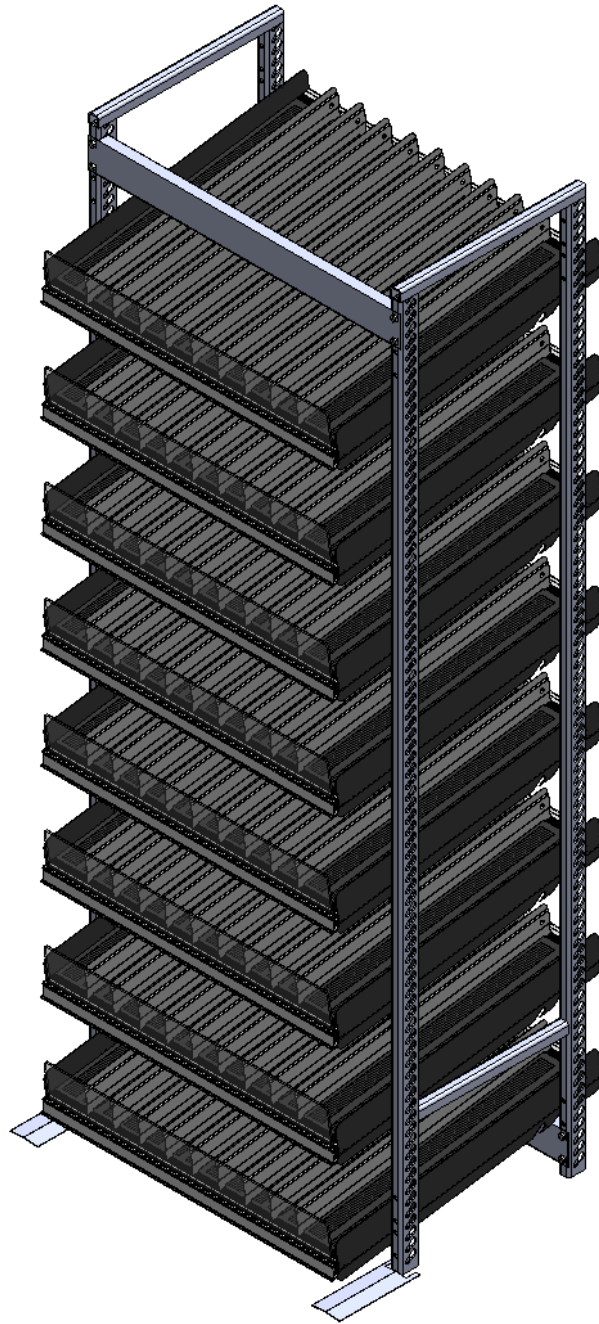

**Questions?
Call Customer Service...800-323-2517**

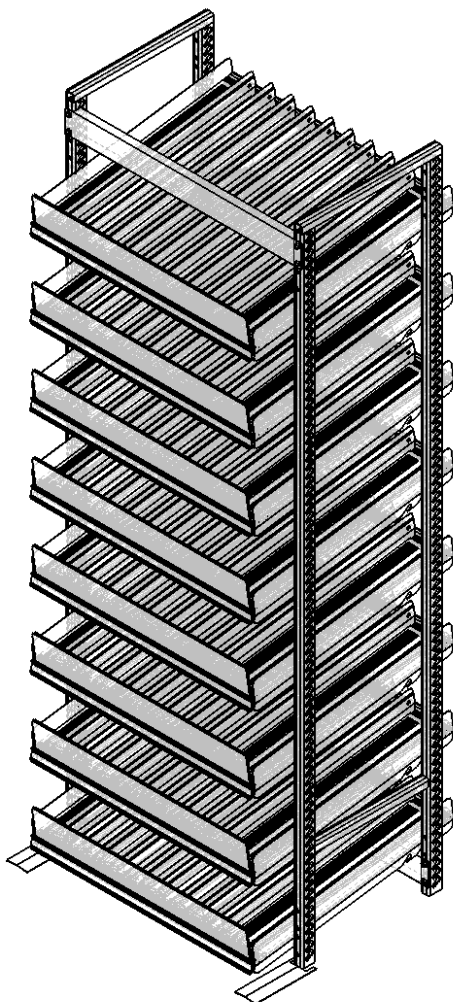

VERSARACK + VERSAROLLERSHELF®

GUÍA DE ENSAMBLAJE



Intertek

Sanitation Listed
Certified to NSF/ANSI 2 by Intertek


-Tamaño de partes pueden diferir dependiendo de la orden del cliente.

-Cantidad de partes pueden diferir dependiendo de la orden del cliente.

Requiere:



Dos personas

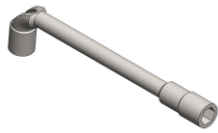

Llave de 1/2" & Ratchet con
tubo profundo de 1/2"





Nivelador




Guantes
de Trabajo

Lista de Partes

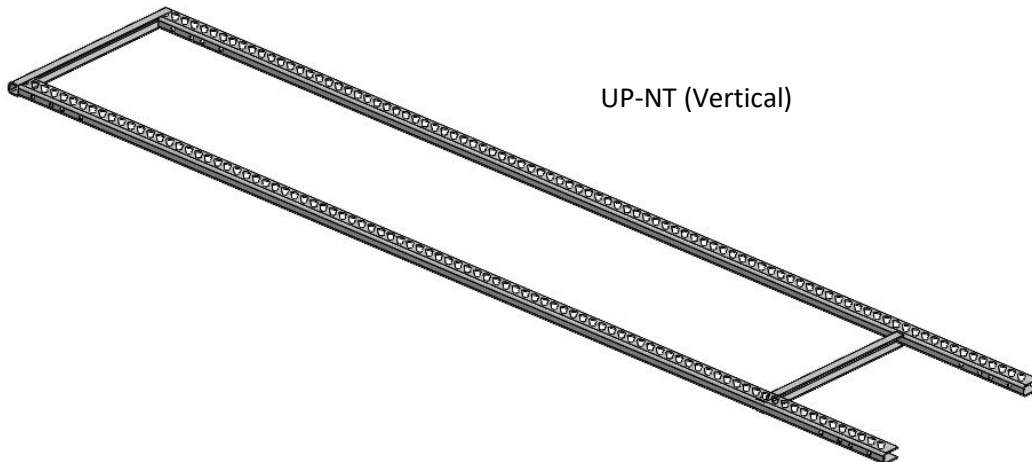


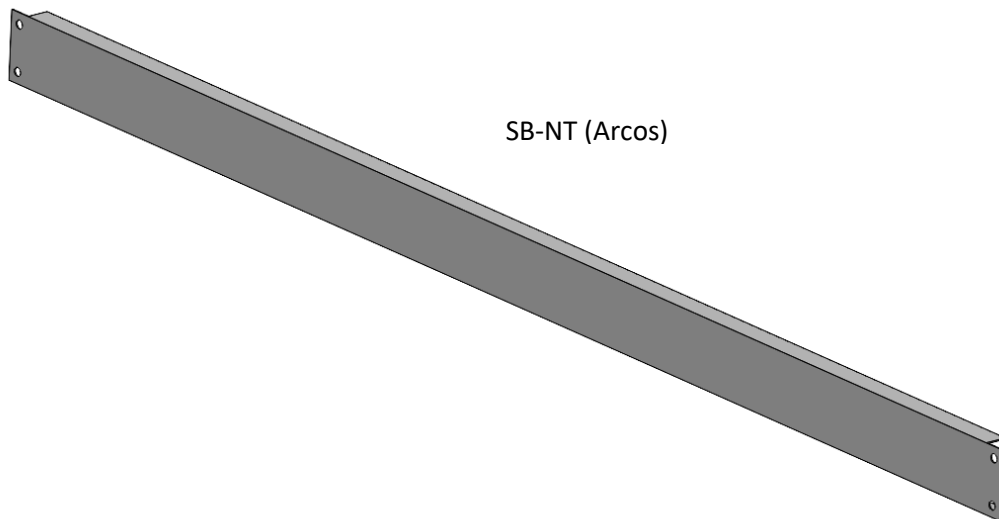


SB-NT (Arcos)

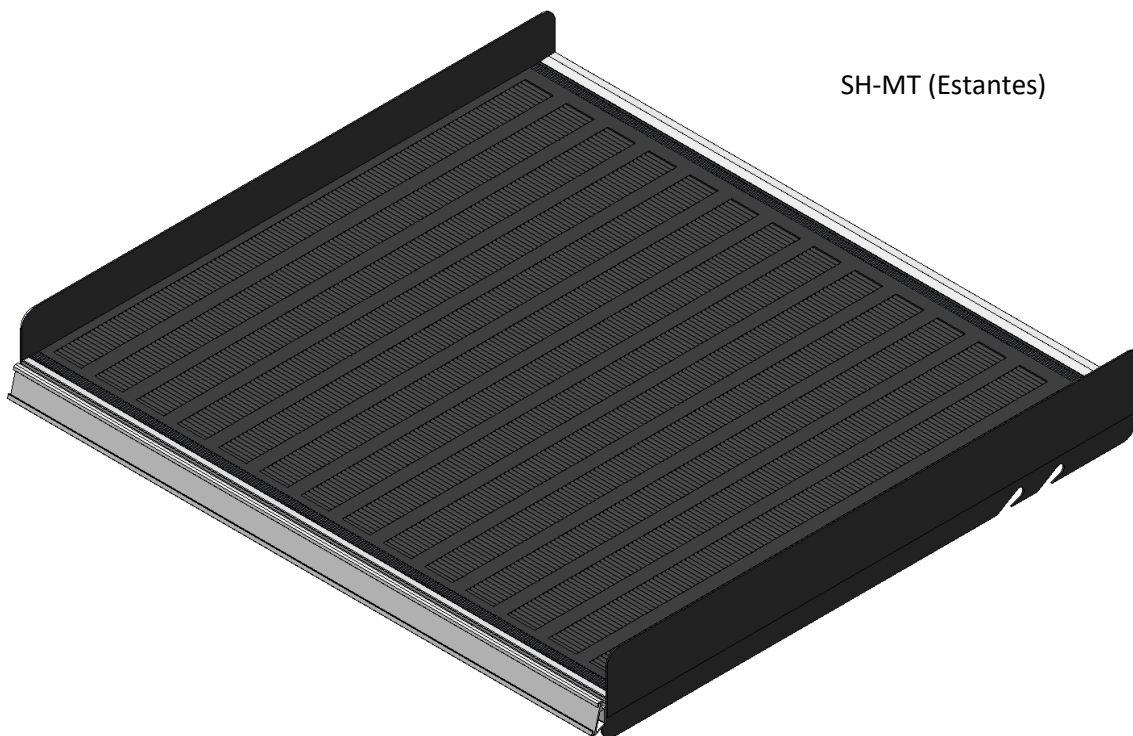


SH-MT (Estantes)

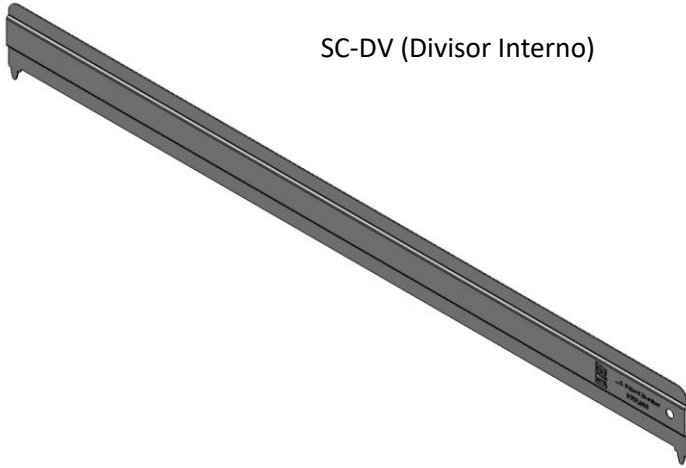


SC-DV (Divisor Interno)

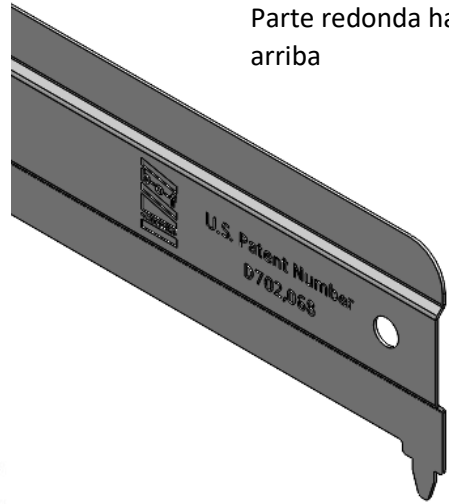

Parte redonda hacia arriba

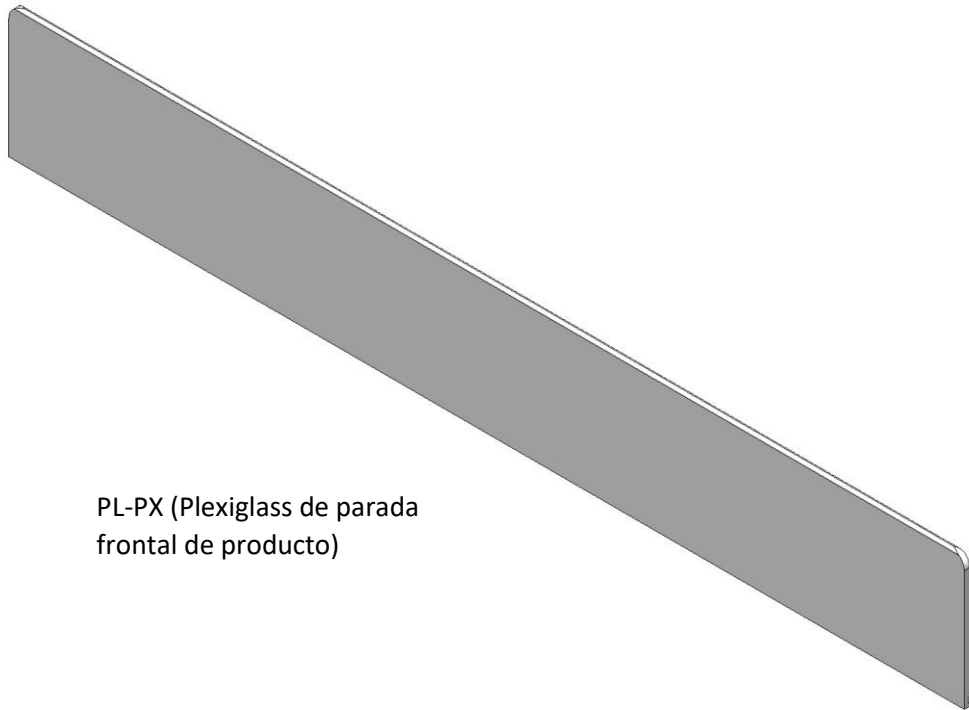


PL-PX (Plexiglass de parada frontal de producto)

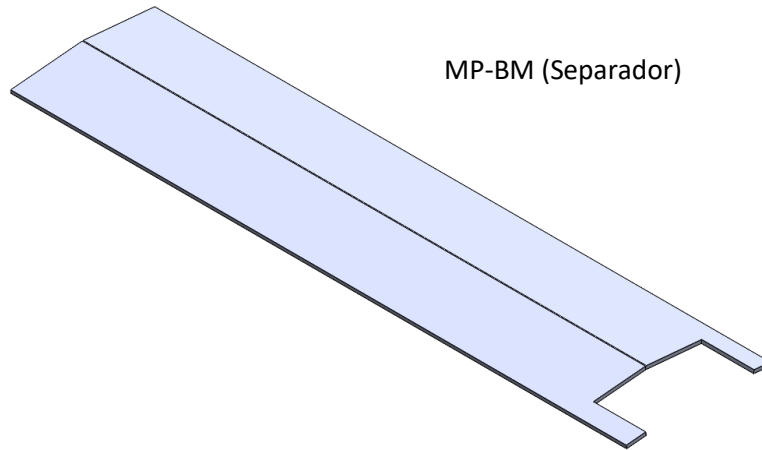


MP-BM (Separador)



MH-CL
(Gancho de estante)

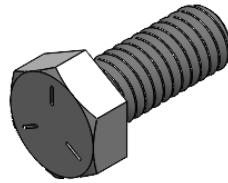



MH-BT
(Tornillo 5/16")

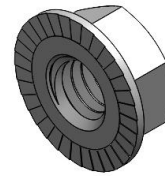



MH-NT
(Tuerca Serrada)

Paso 1: Apretar con llaves, dejar etc. Los. NO
apretar con llaves hasta el final. Locación sugerida de arcos son frente superior y trasero inferior. Cada sección debe tener 6 pulgadas de arco.

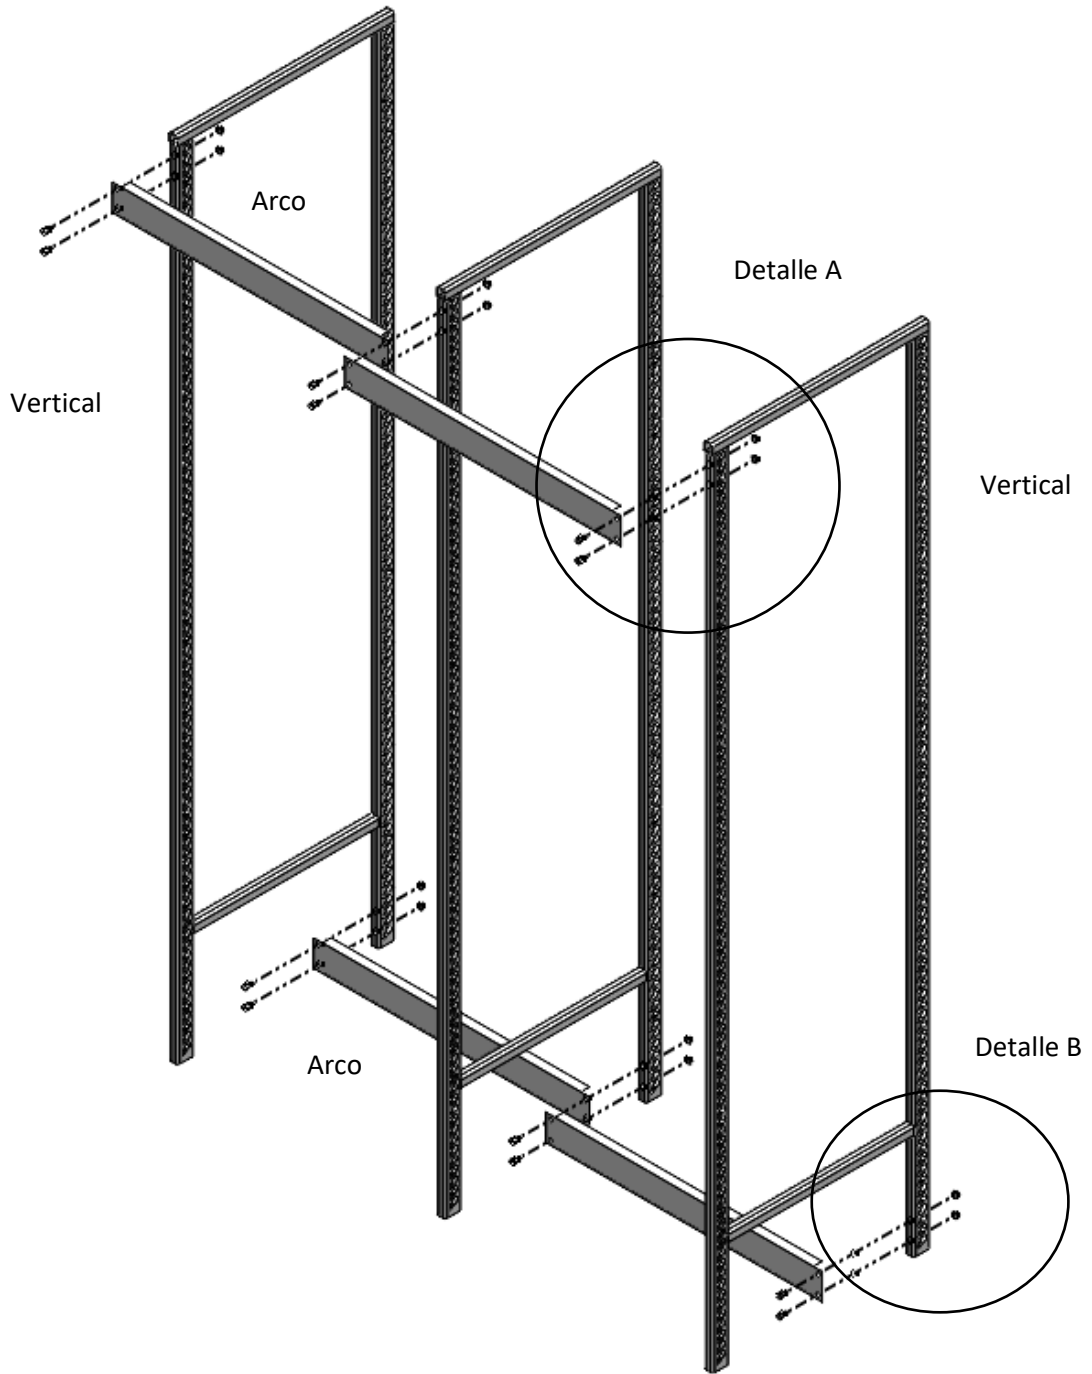


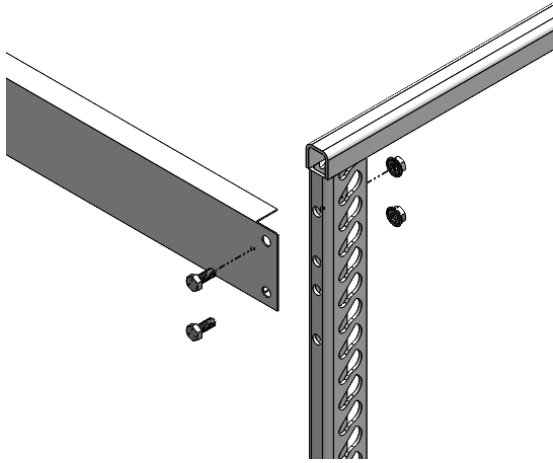



Detalle A

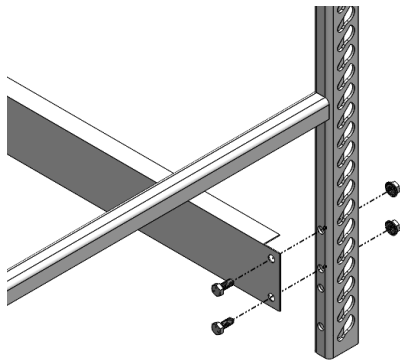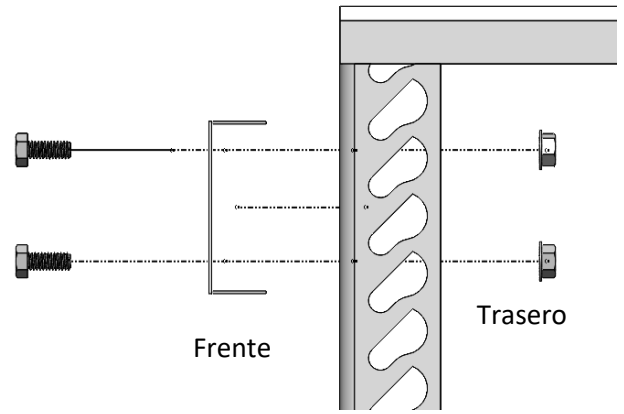


Detalle B

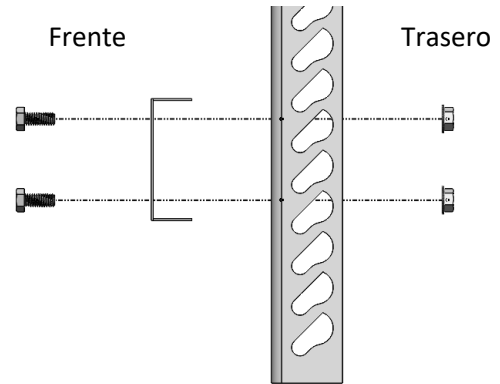


Los marcos de puerta vienen en 2, 3, 4 o 5 por sección, 5 es el máximo número de puertas por sección. Los marcos de estantes deben alinearse con los marcos de puertas. La división entre sección puede identificarse por una barra T desde el lado del cliente de las puertas, o donde puedas ver dos luces desde el lado del producto de las puertas.

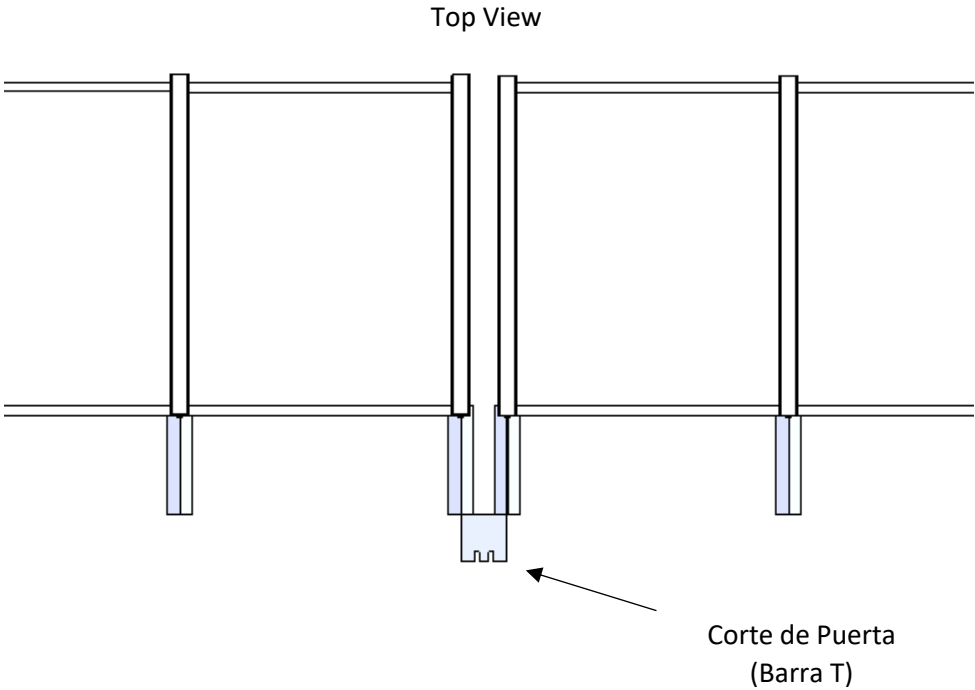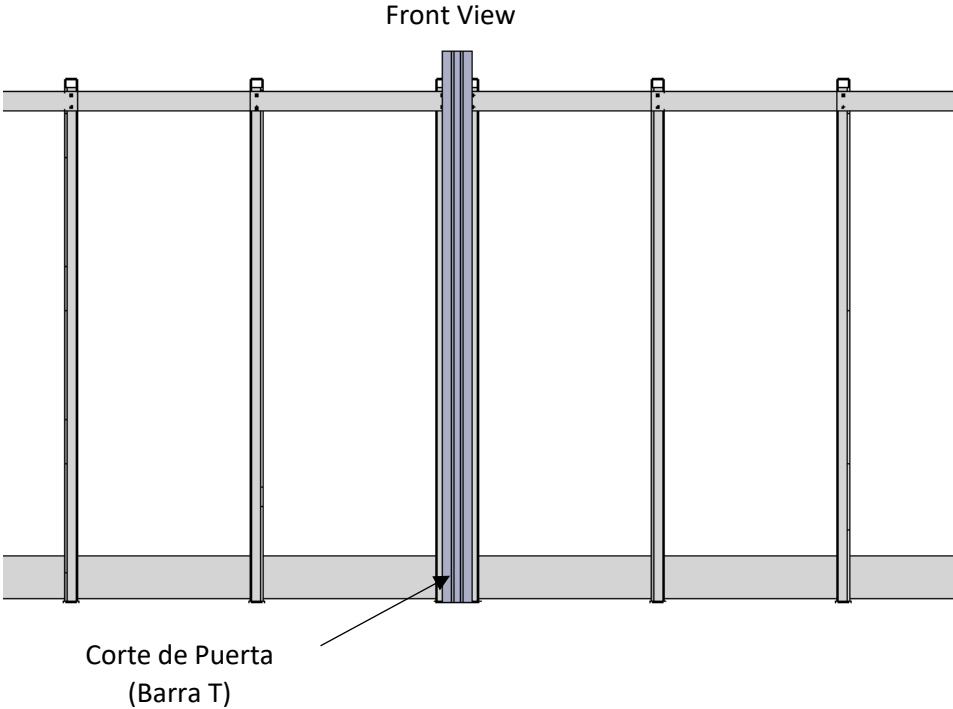


Paso 2: Use separadores para indicar el espacio del vertical de la puerta.

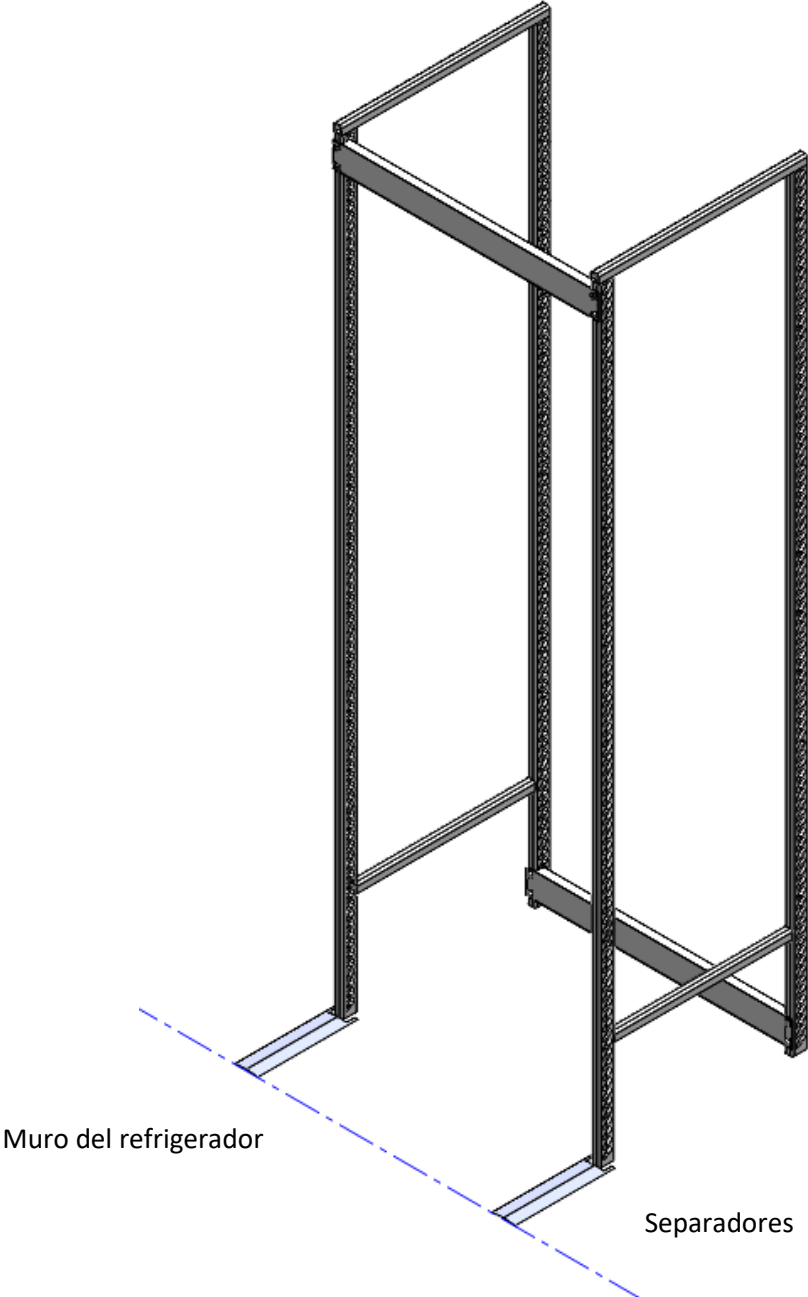

Paso 3: Coloque los ganchos de estantes en el marco del vertical para colocar los estantes.

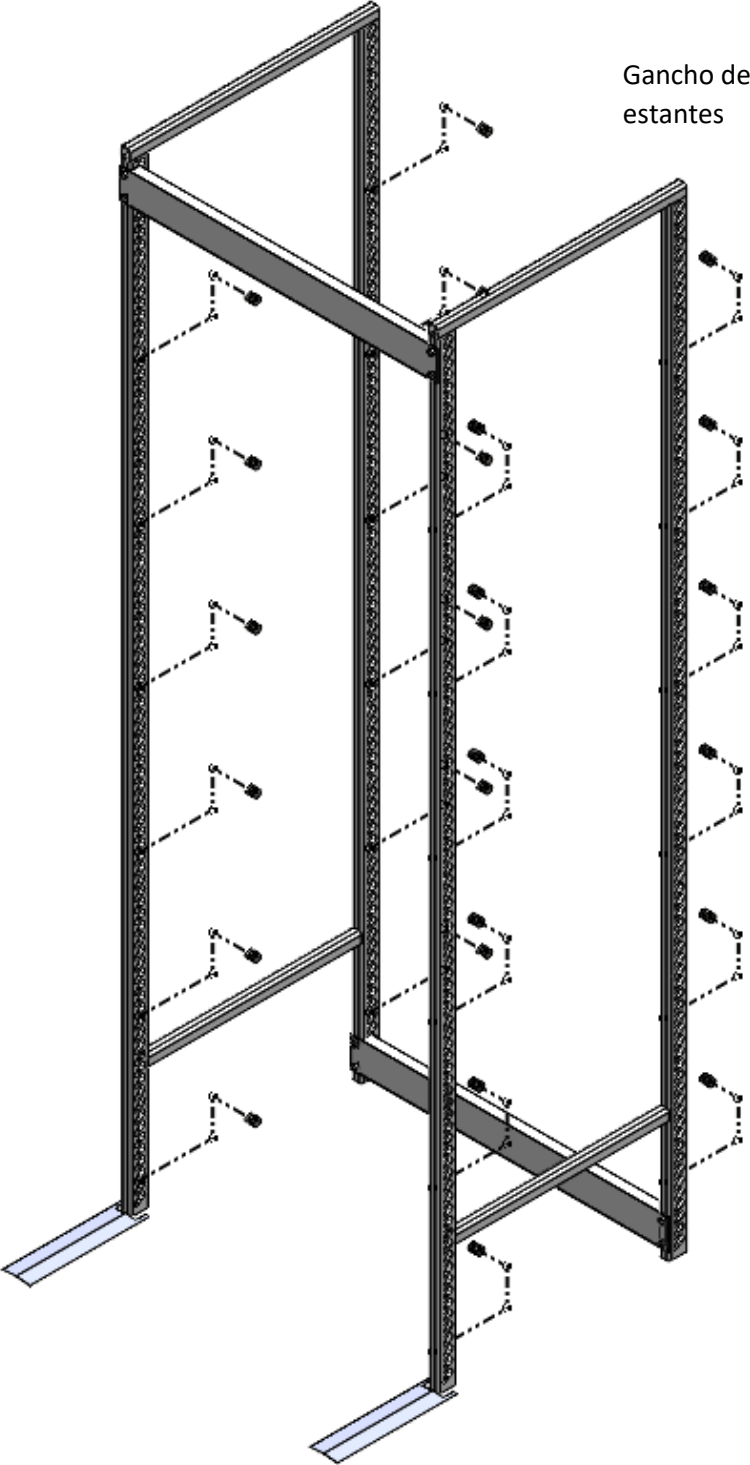


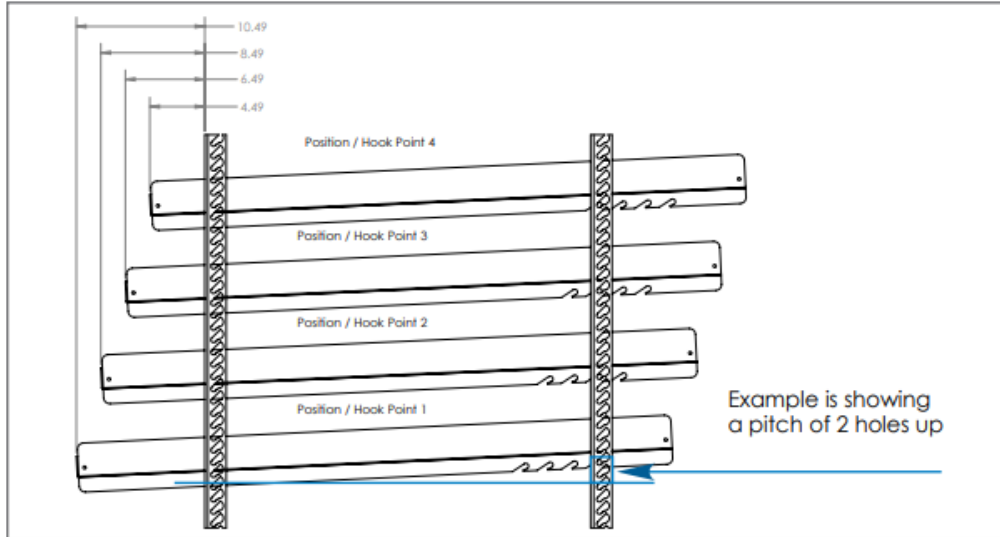


27" Shelf Depth


Product	Number of keyholes notches up
Plastic beverage	3
Carton beer	4
Cardboard water	4
Liquid dairy	3
Liquid dairy	4
Glass packaged	2

Paso 4: Instale **únicamente** los estantes Superior e Inferior. Use un nivelador para asegurarse que la estructura esté recta.

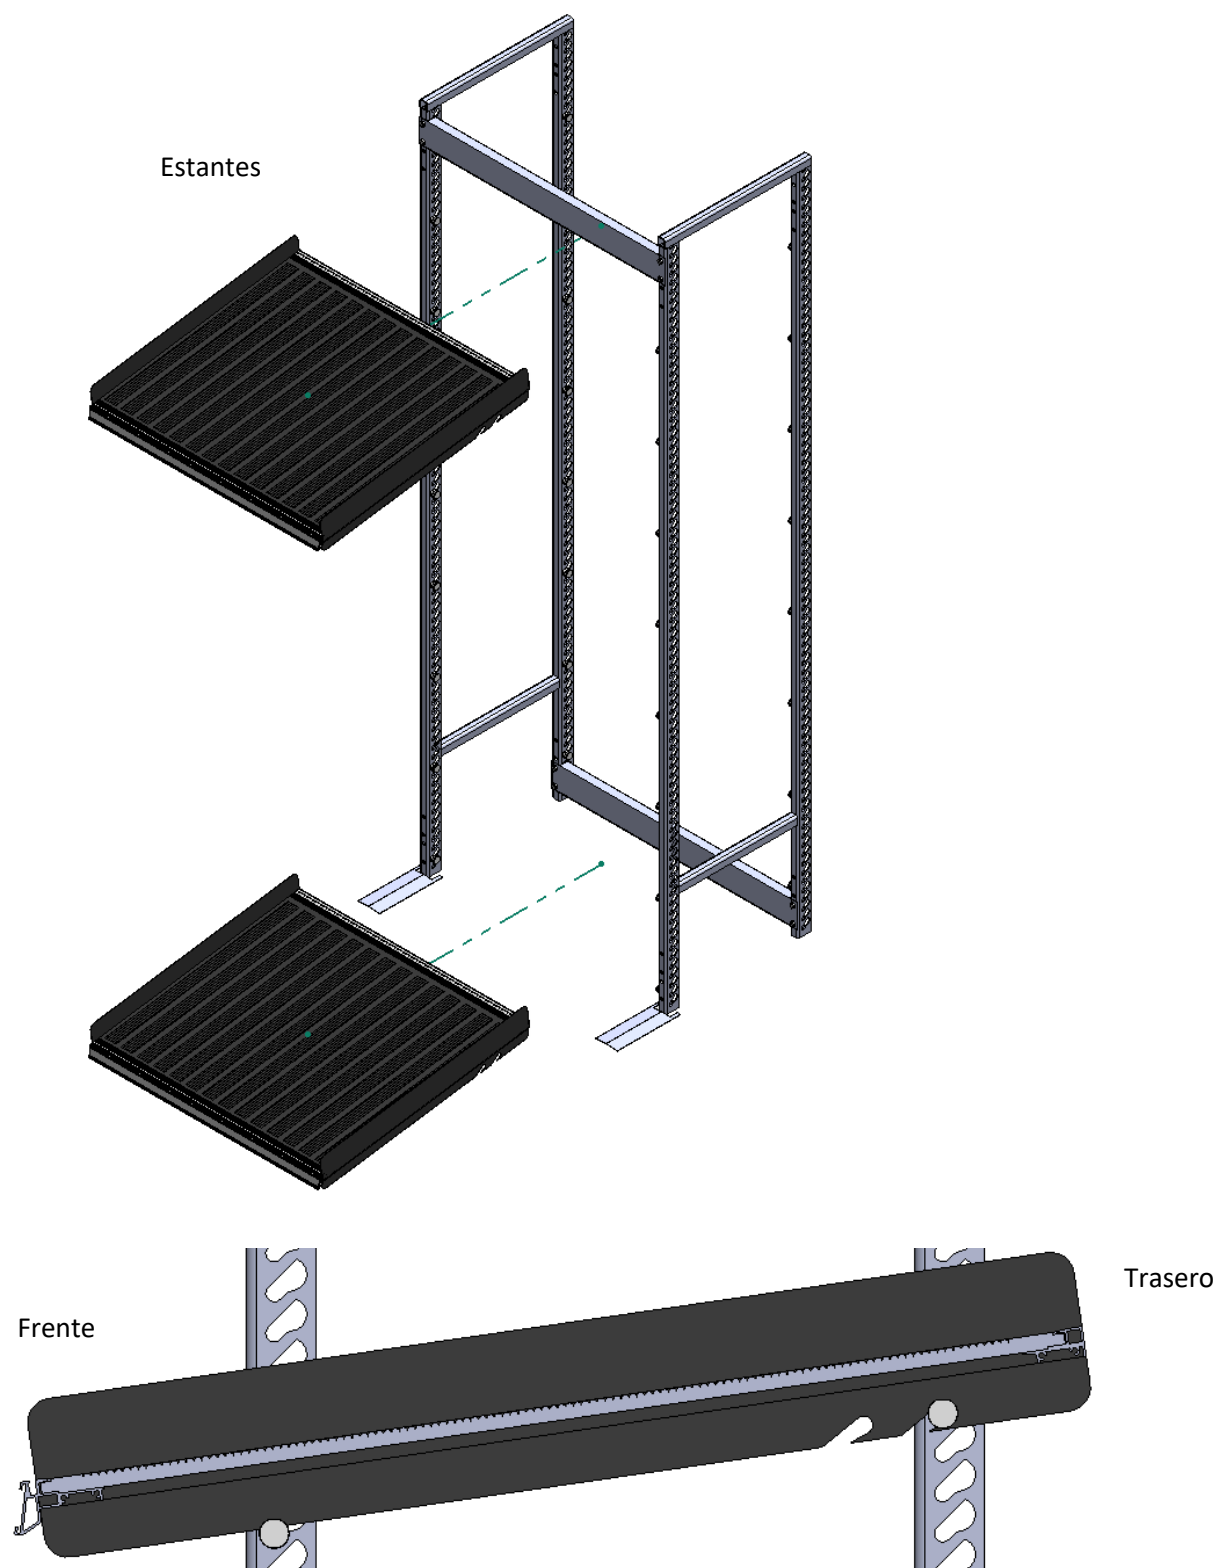


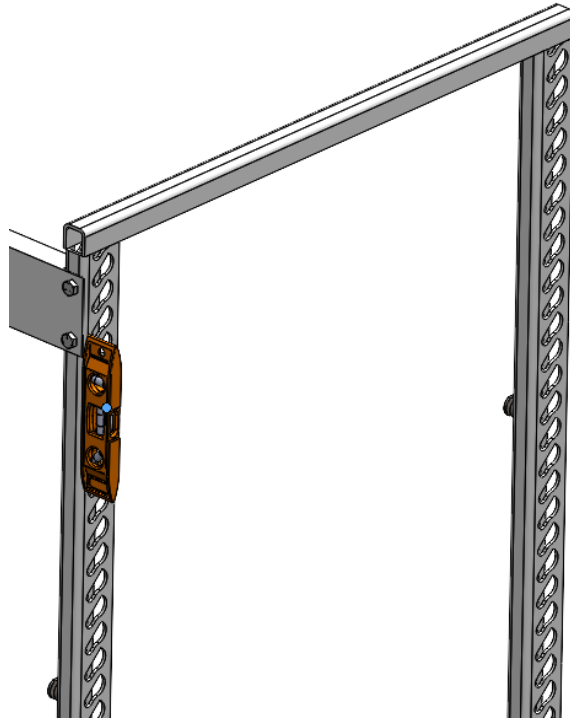


Paso 5: **Apriete** todos los tornillos usando las llaves.

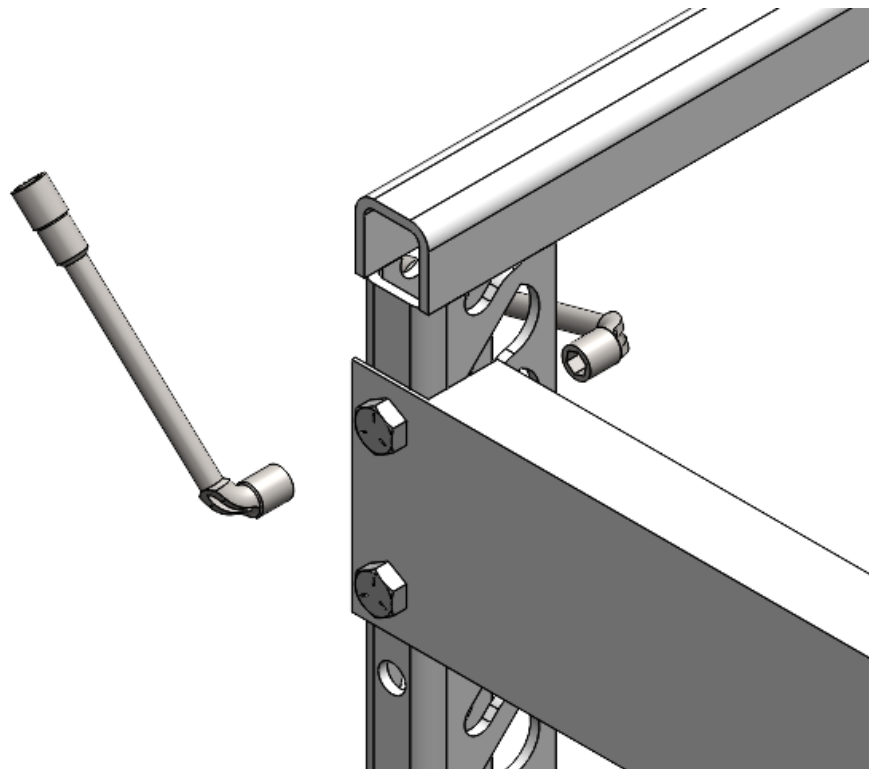


Paso 6: Coloque el resto de los estantes.

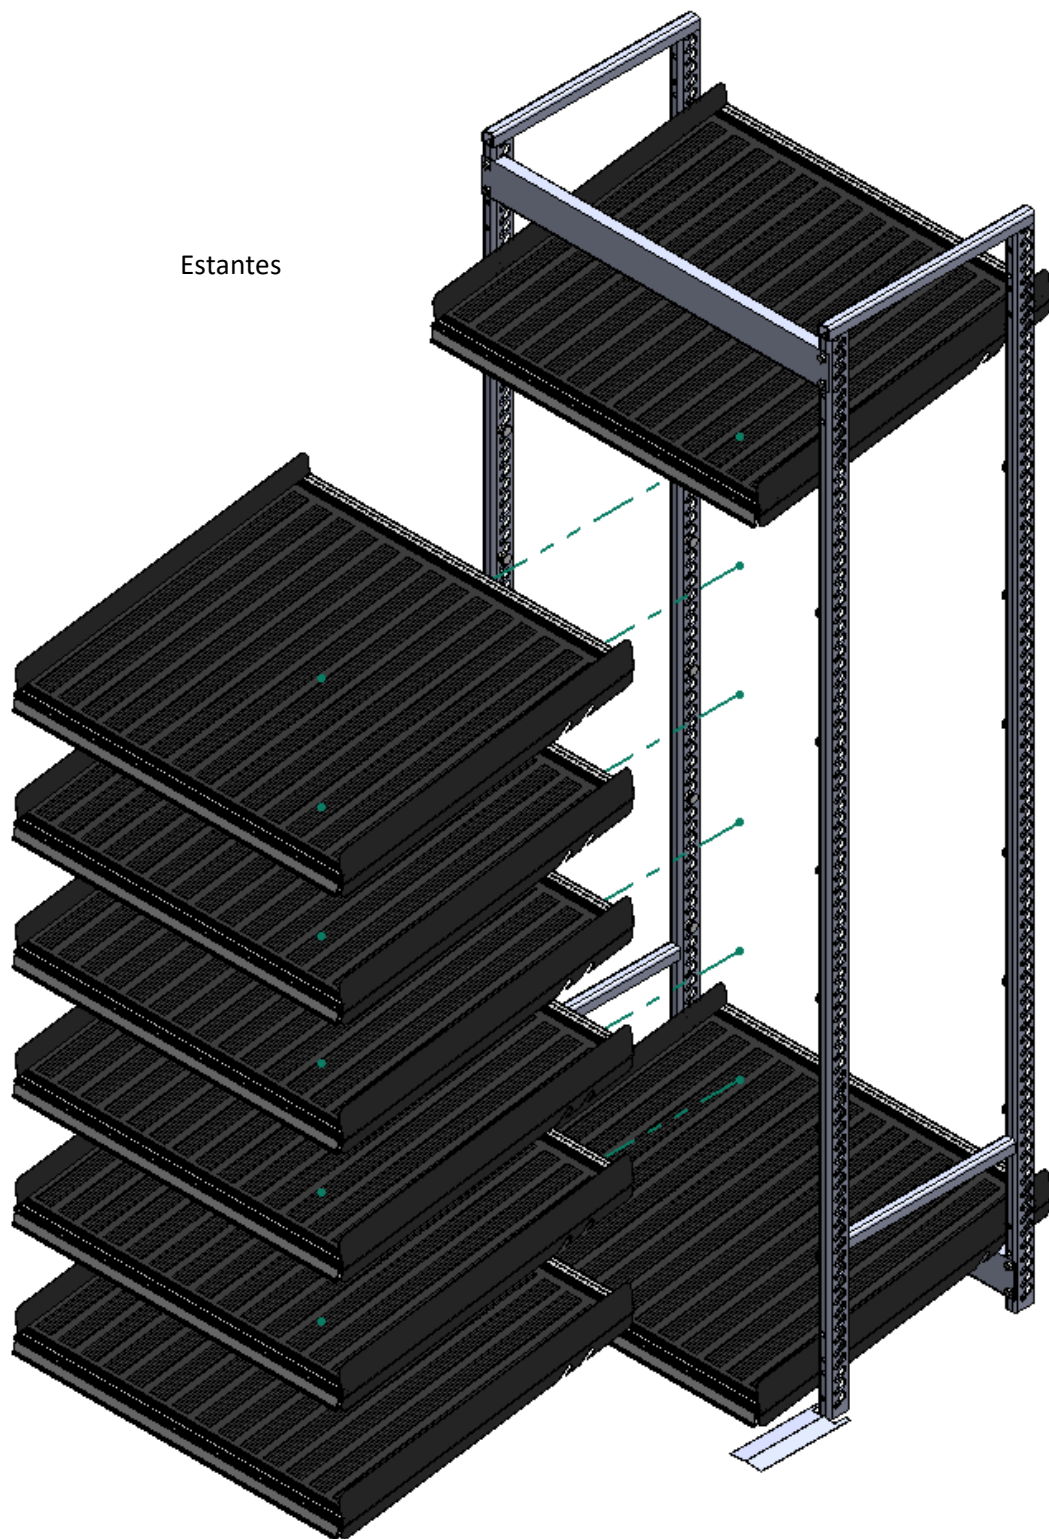

Paso 7: Instale cuantos divisores internos necesite en base al producto que será mostrado.

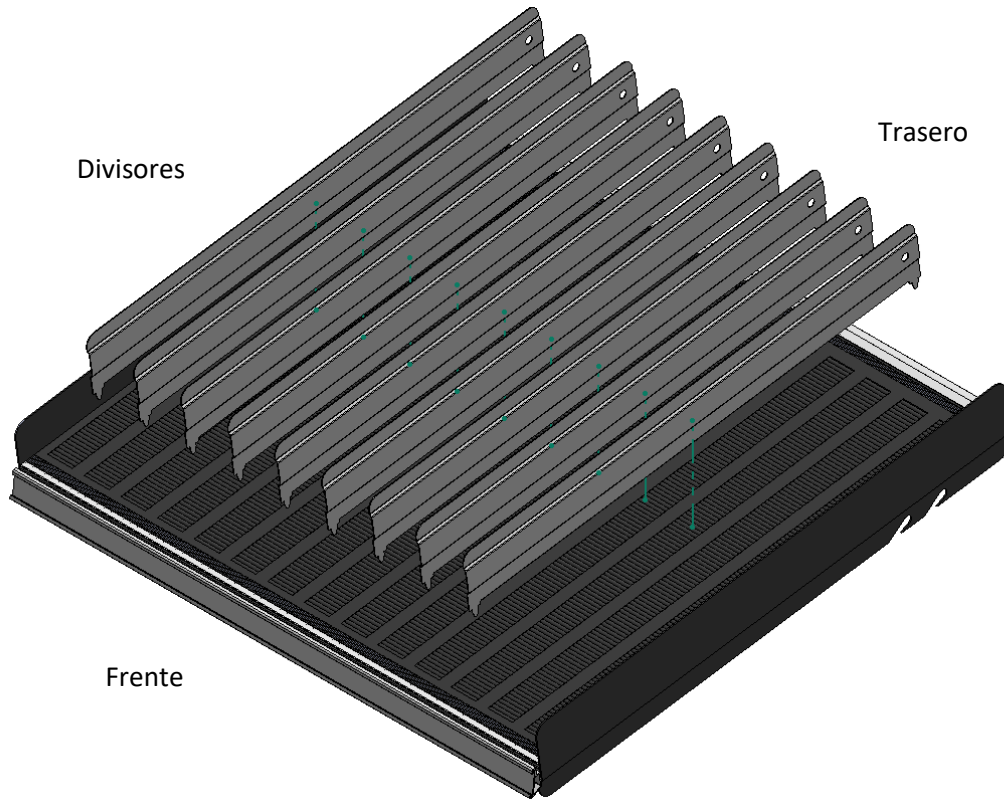

Los divisores deben estar asegurados en las guías, con la parte redonda hacia arriba y debe ir con el mismo lado en cada estante.


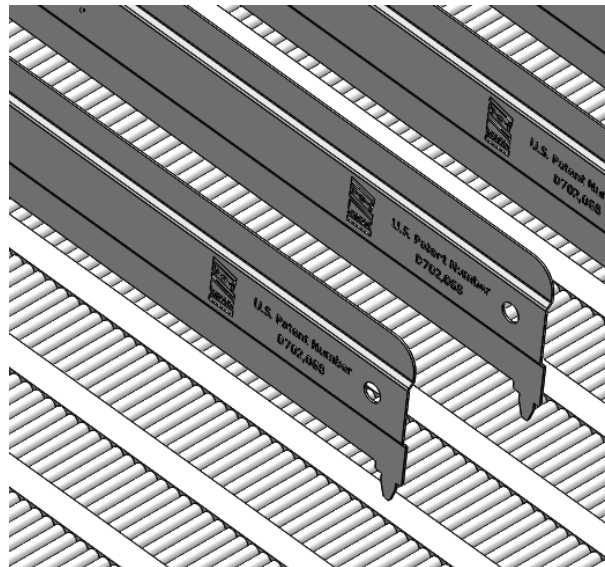


Colocando dos productos en cada línea es una manera útil de colocar los divisores.


Paso 8: Instale los Plexiglass de parada frontal dentro del molde de precio frontal deslizándolo por un lado.

Plexiglass de
parada frontal

Trasero

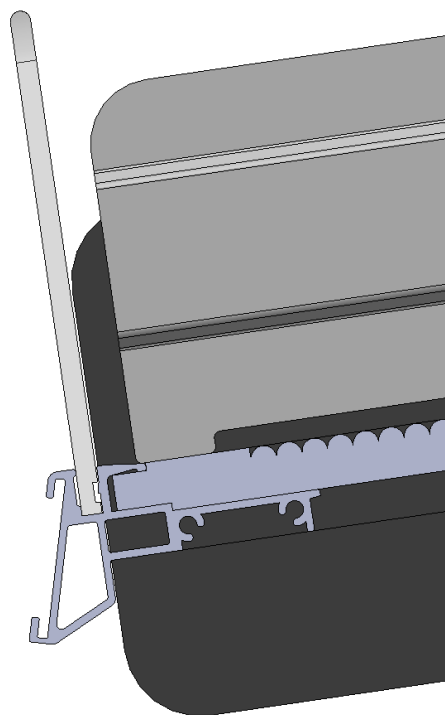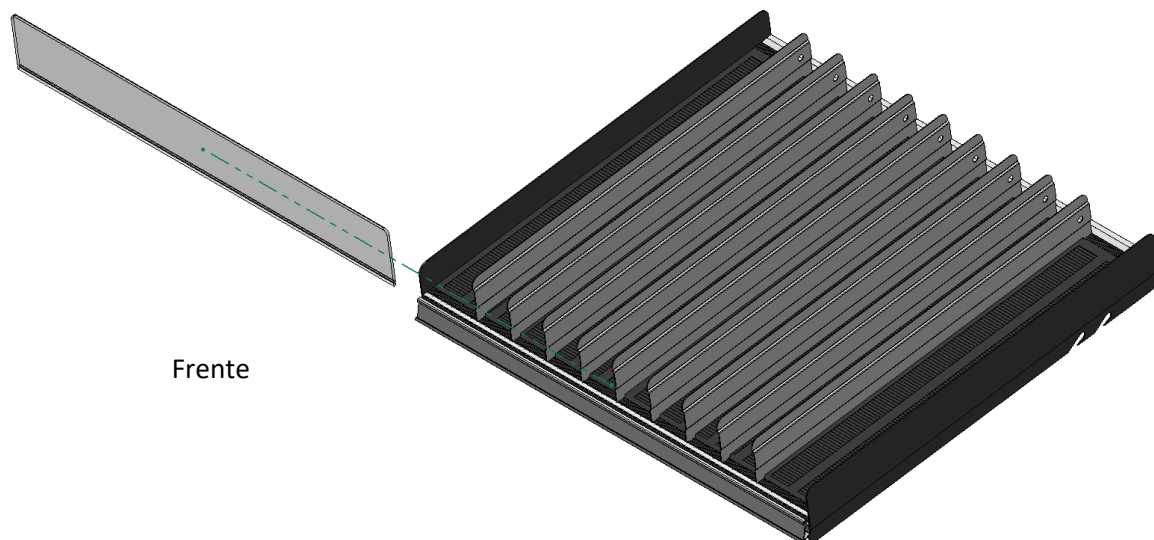

Ensamblaje Completo:

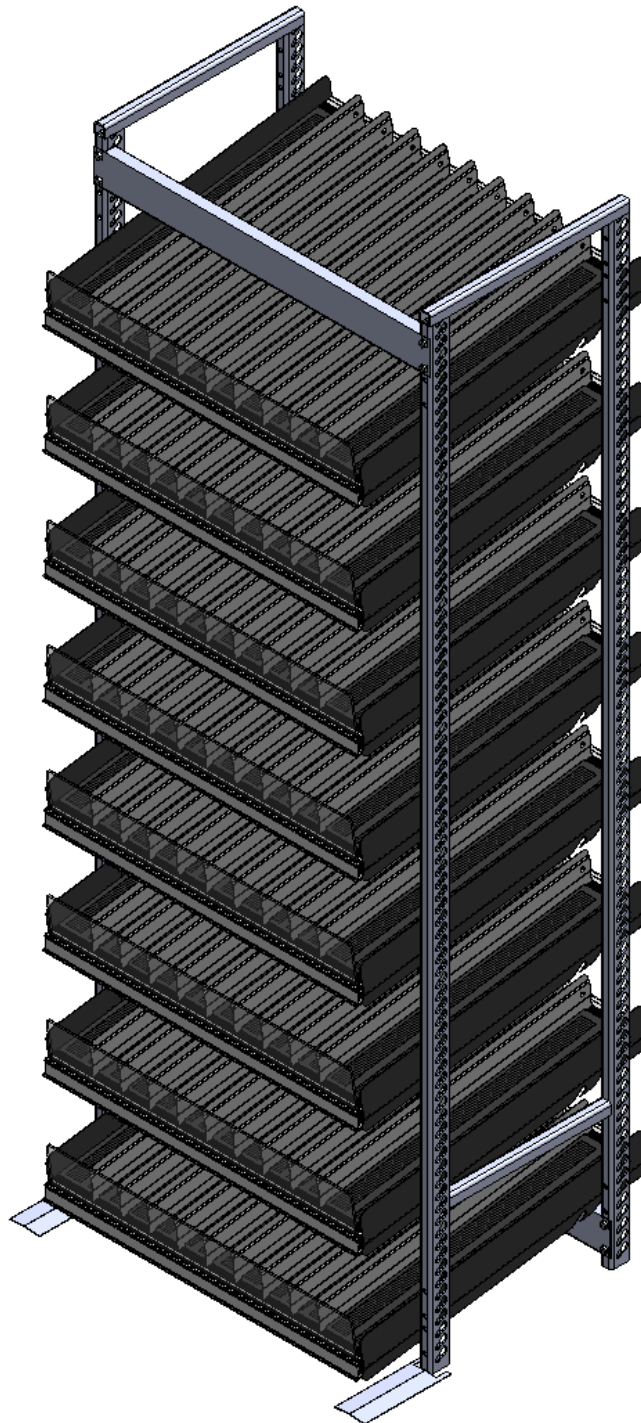

¿Preguntas?

Llame al Servicio al Cliente...800-323-2517